

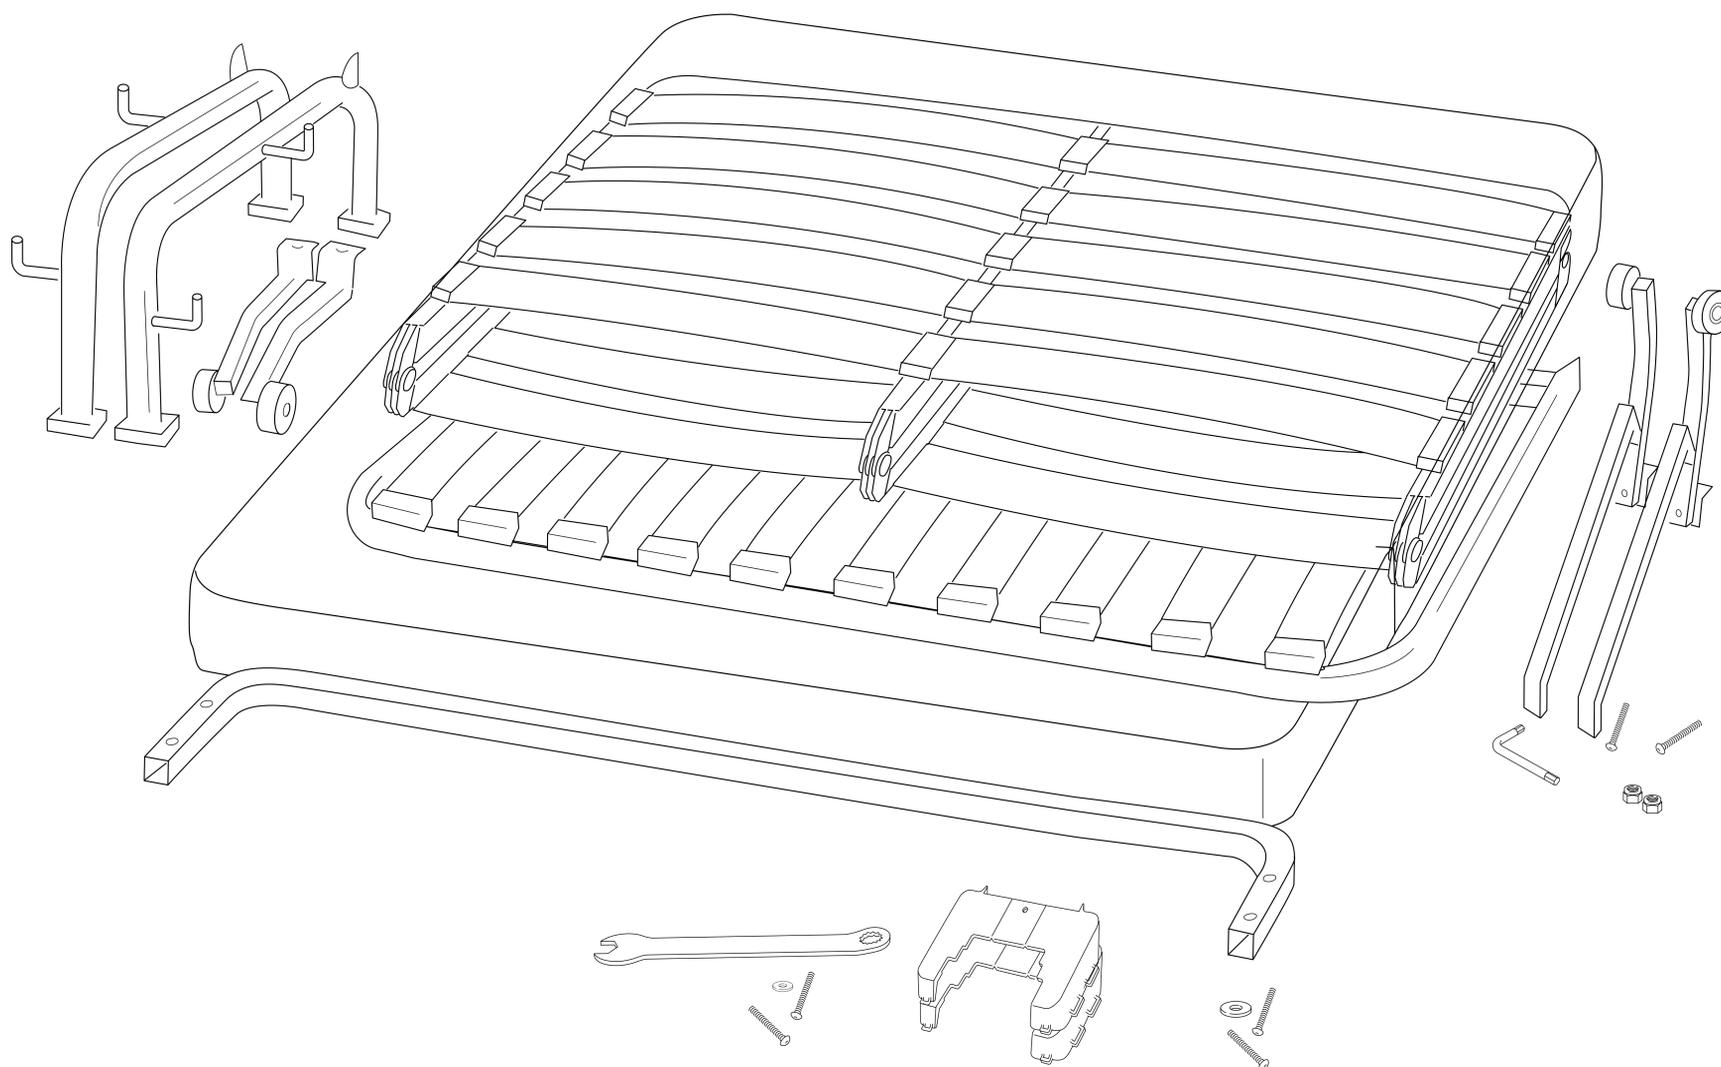
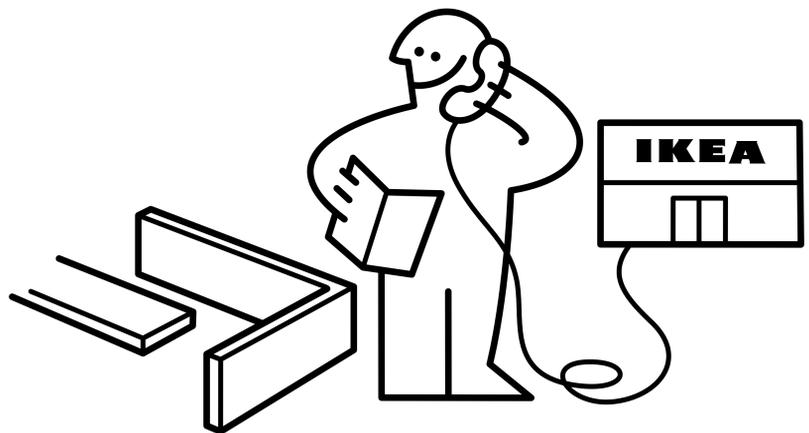
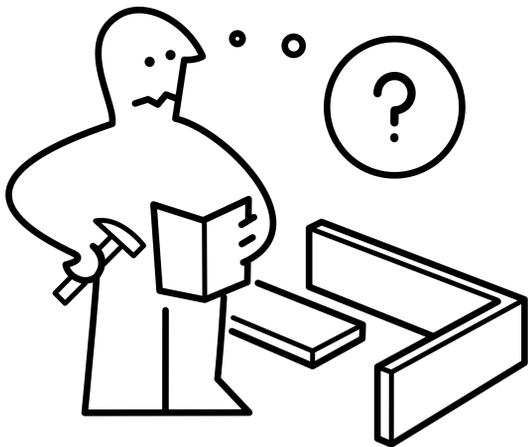
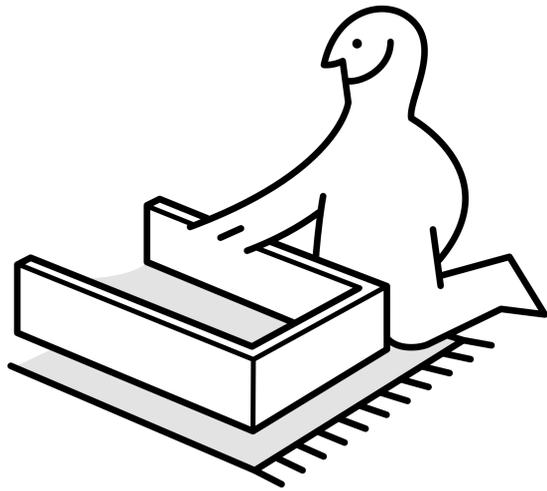
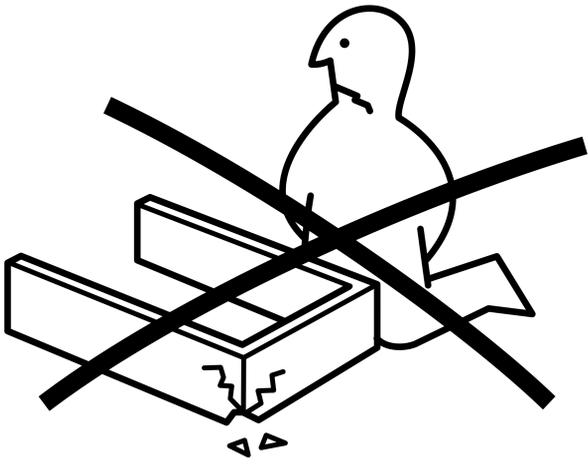
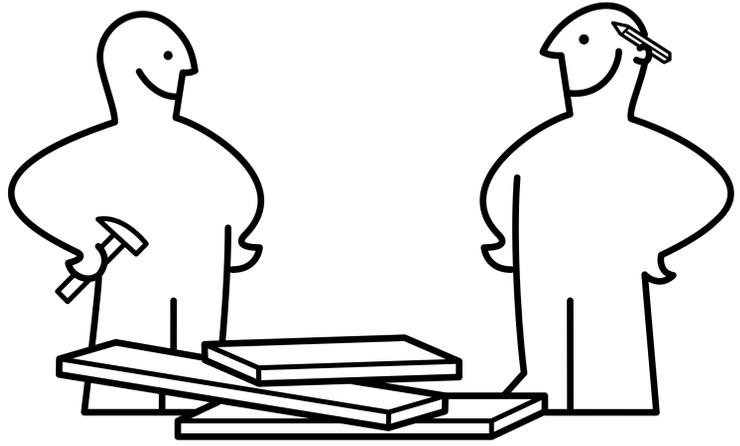


LYCKSELE






DISASSEMBLY INSTRUCTIONS

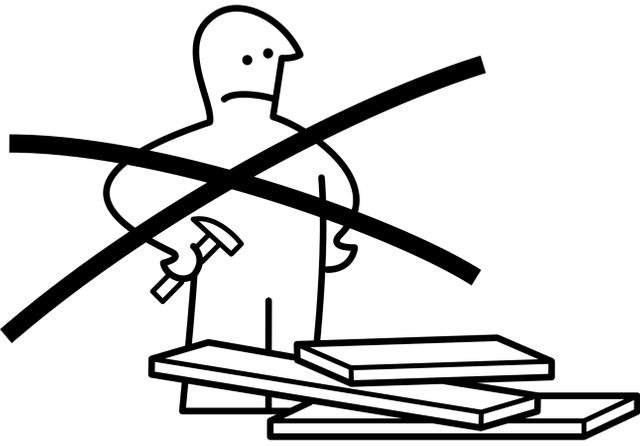


Design and Quality
IKEA of Sweden

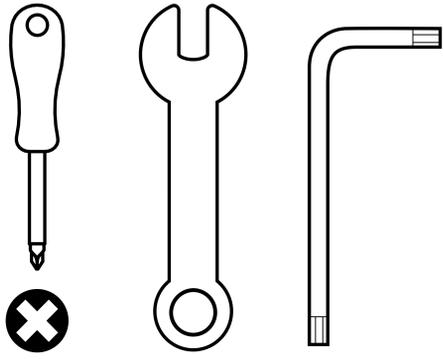


1

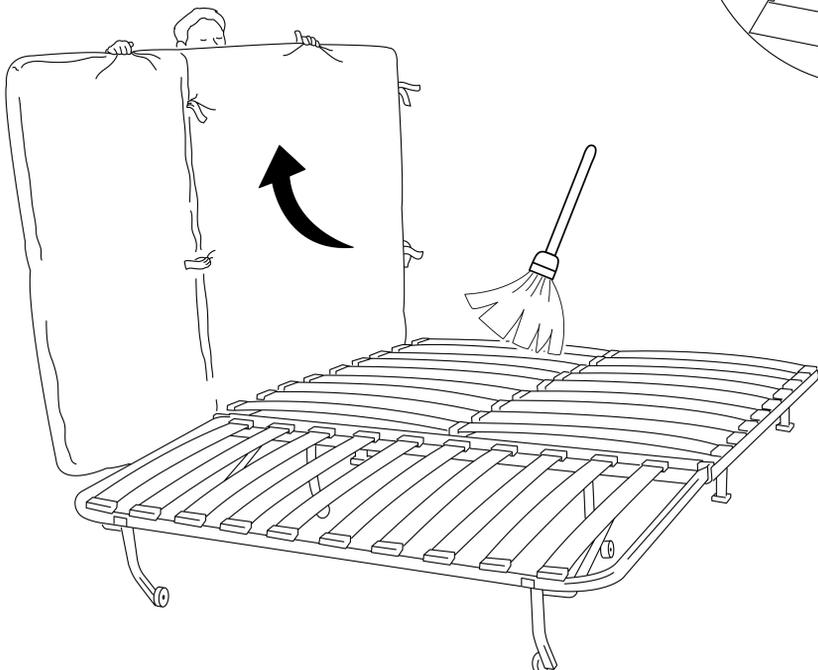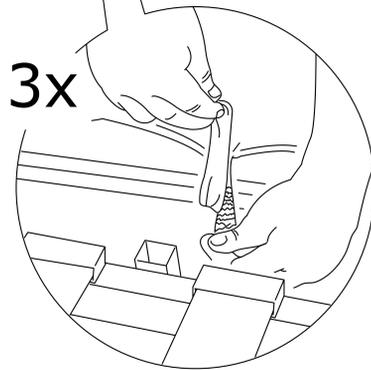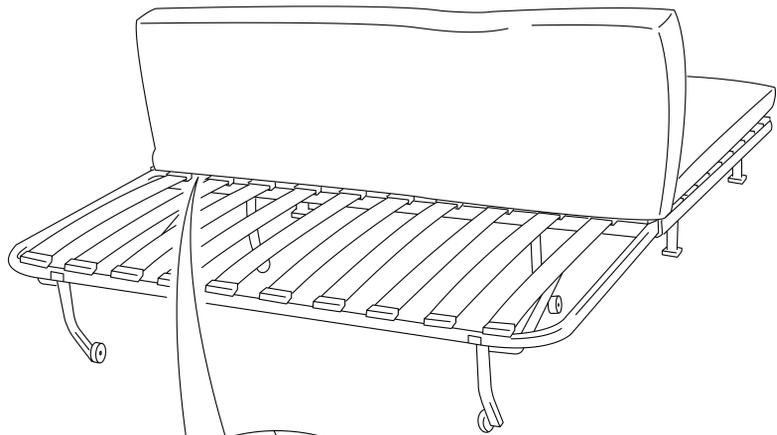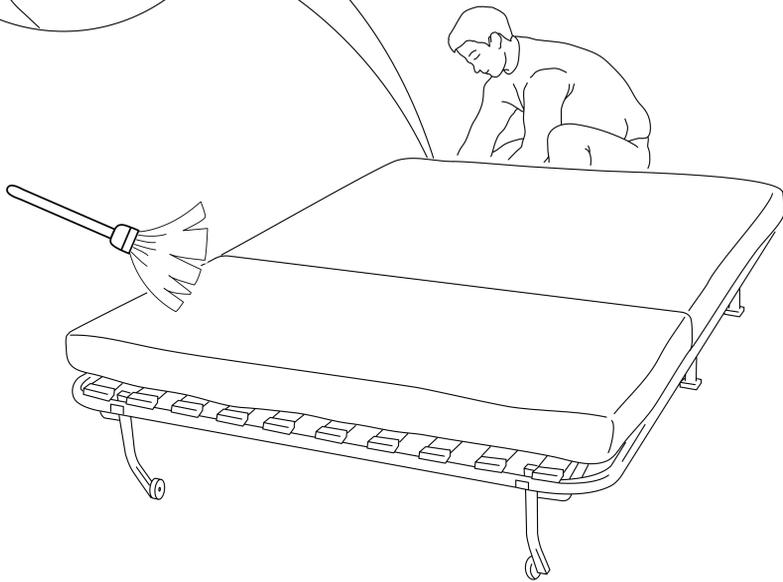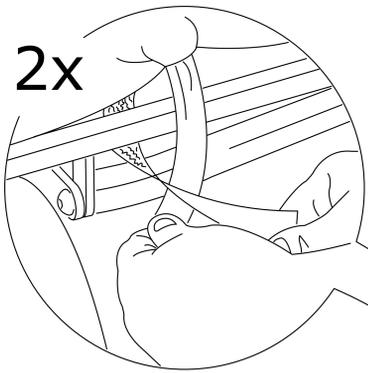


2

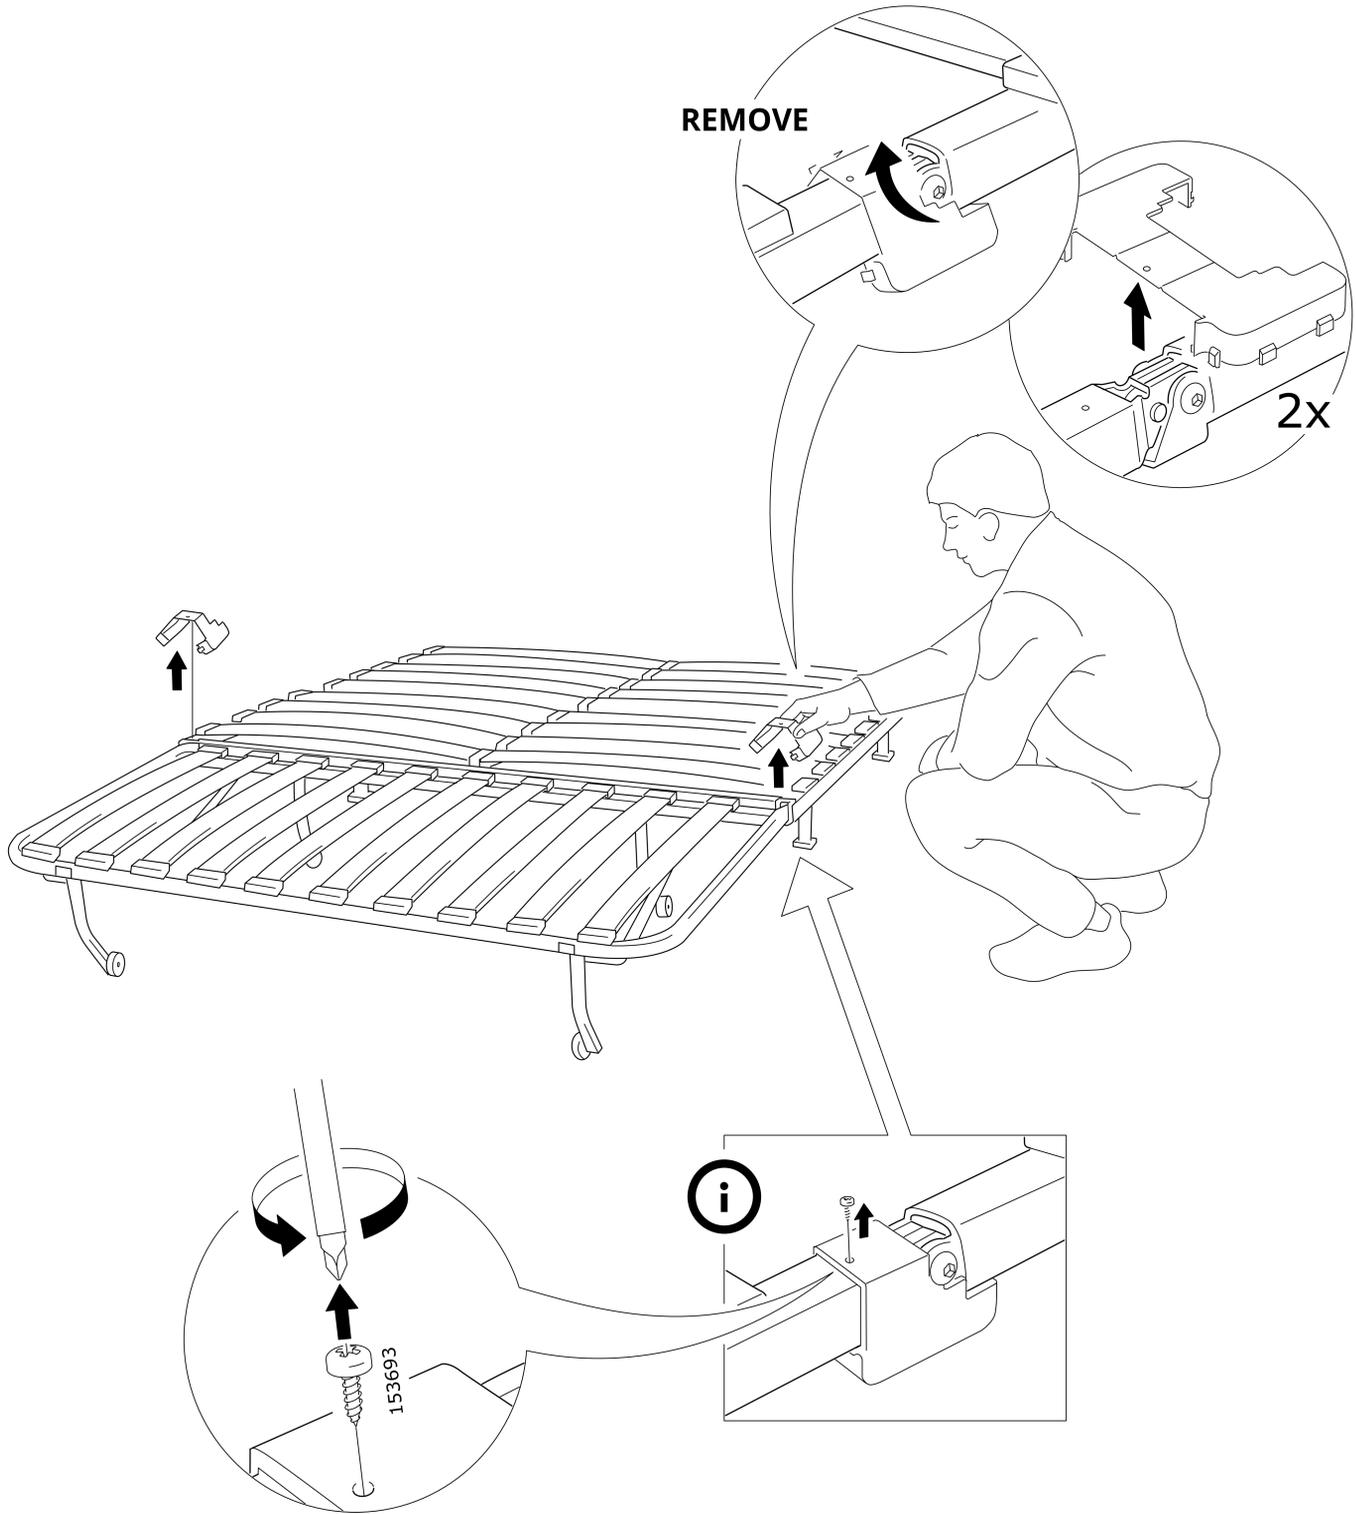


3

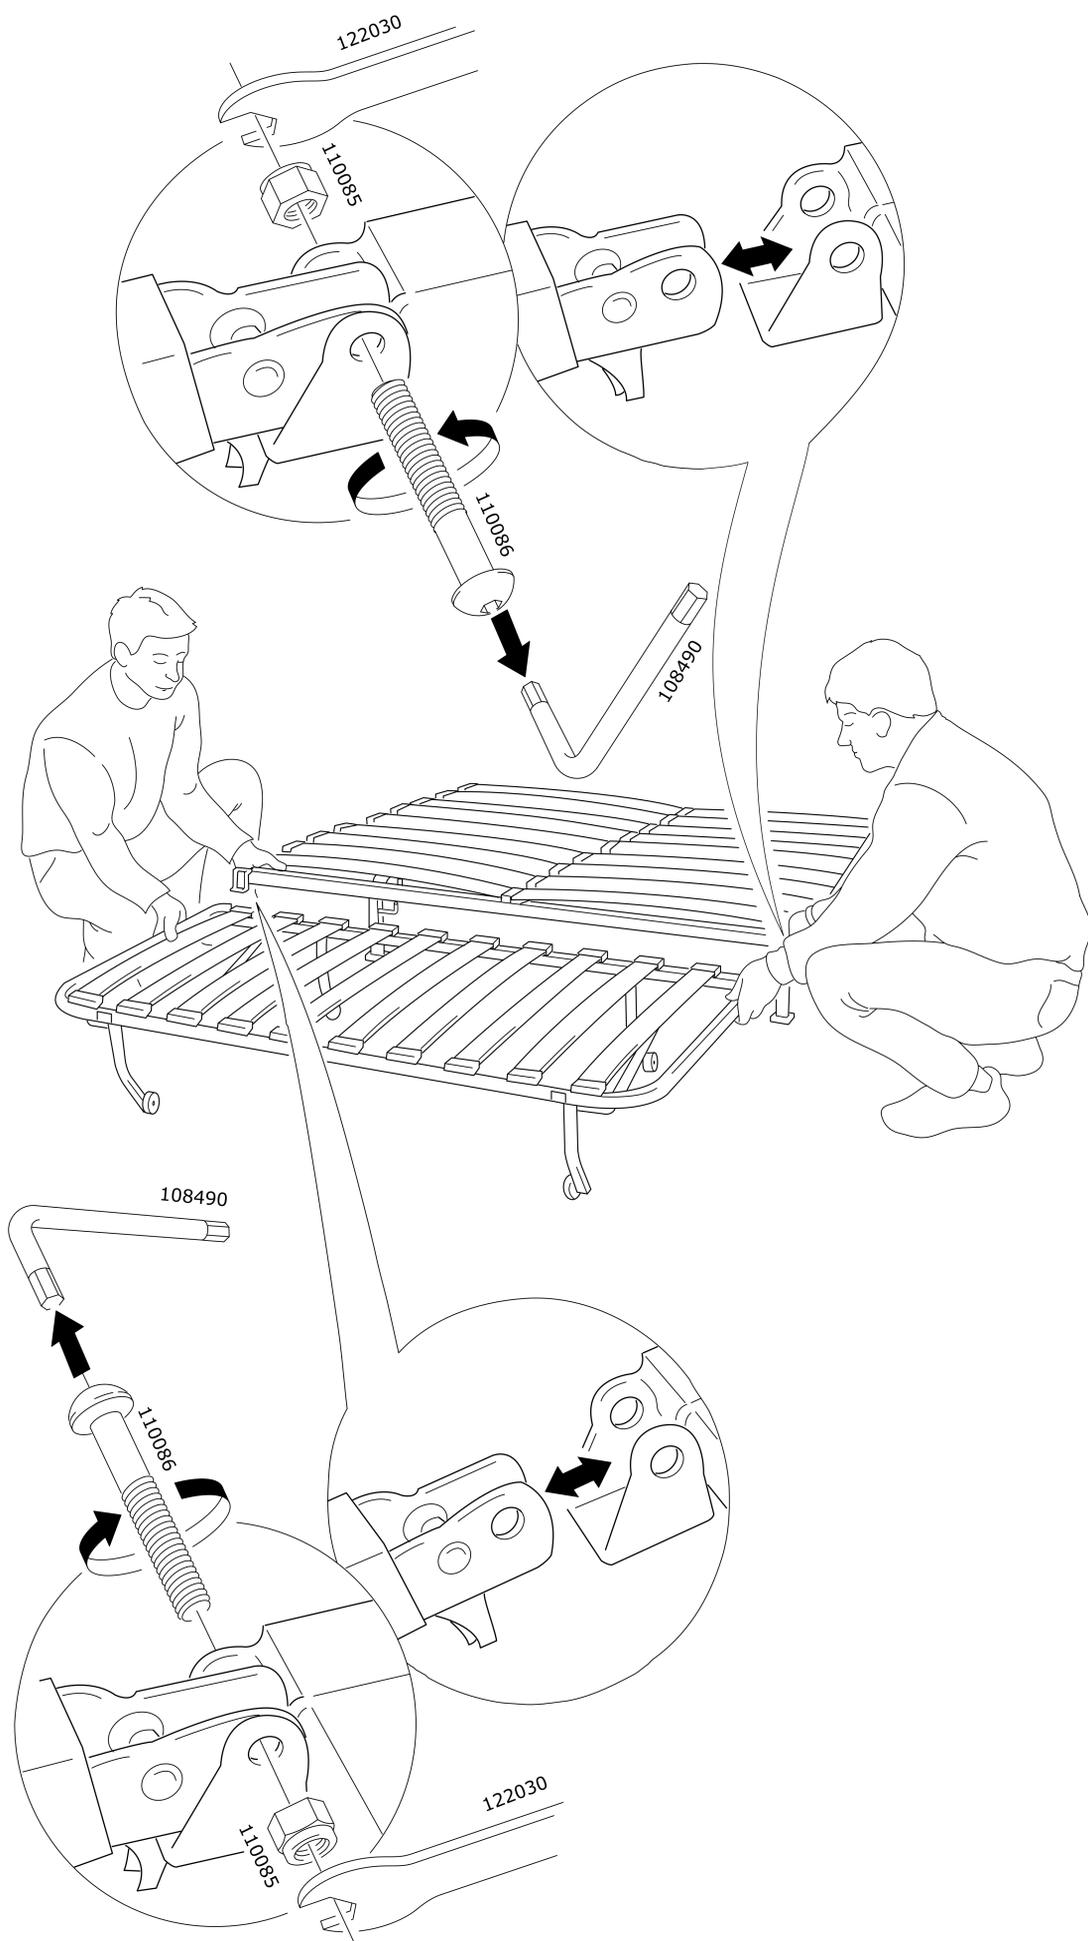


4

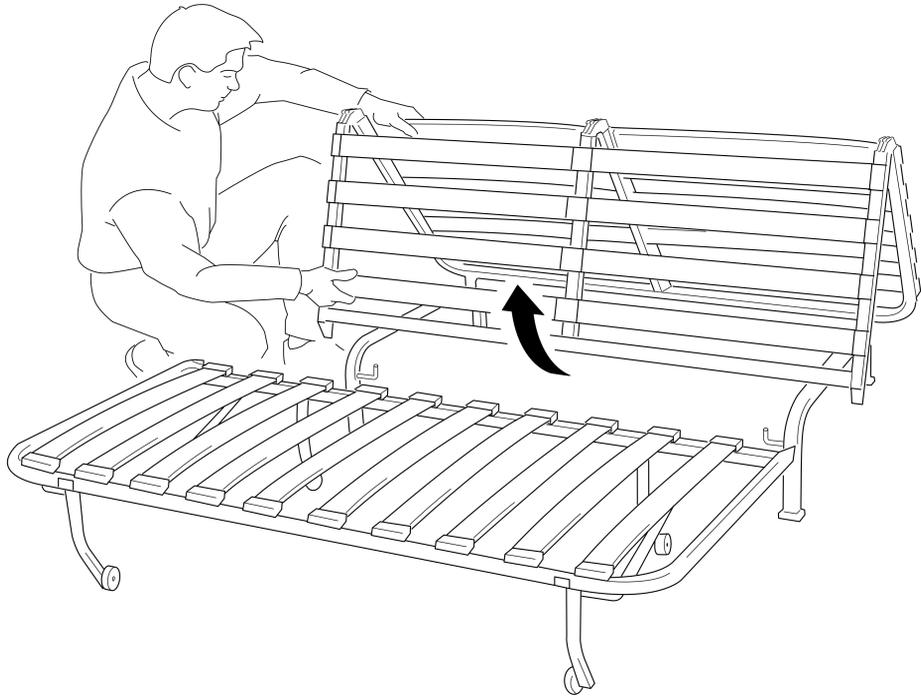



5

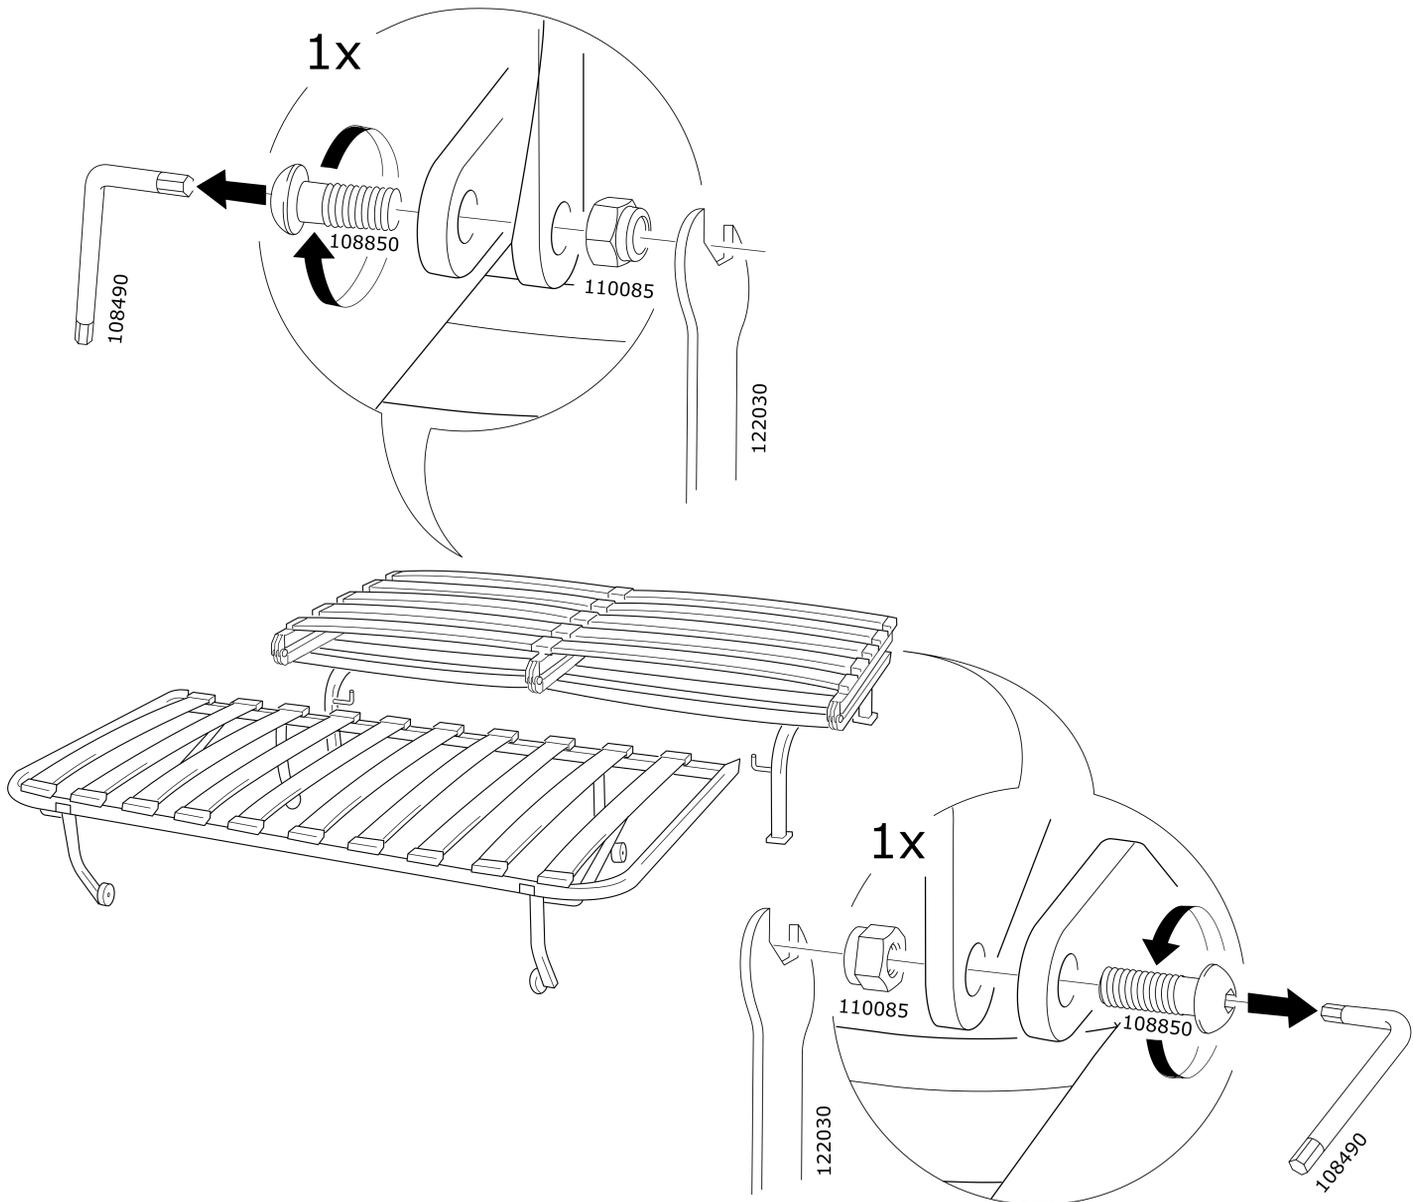


6

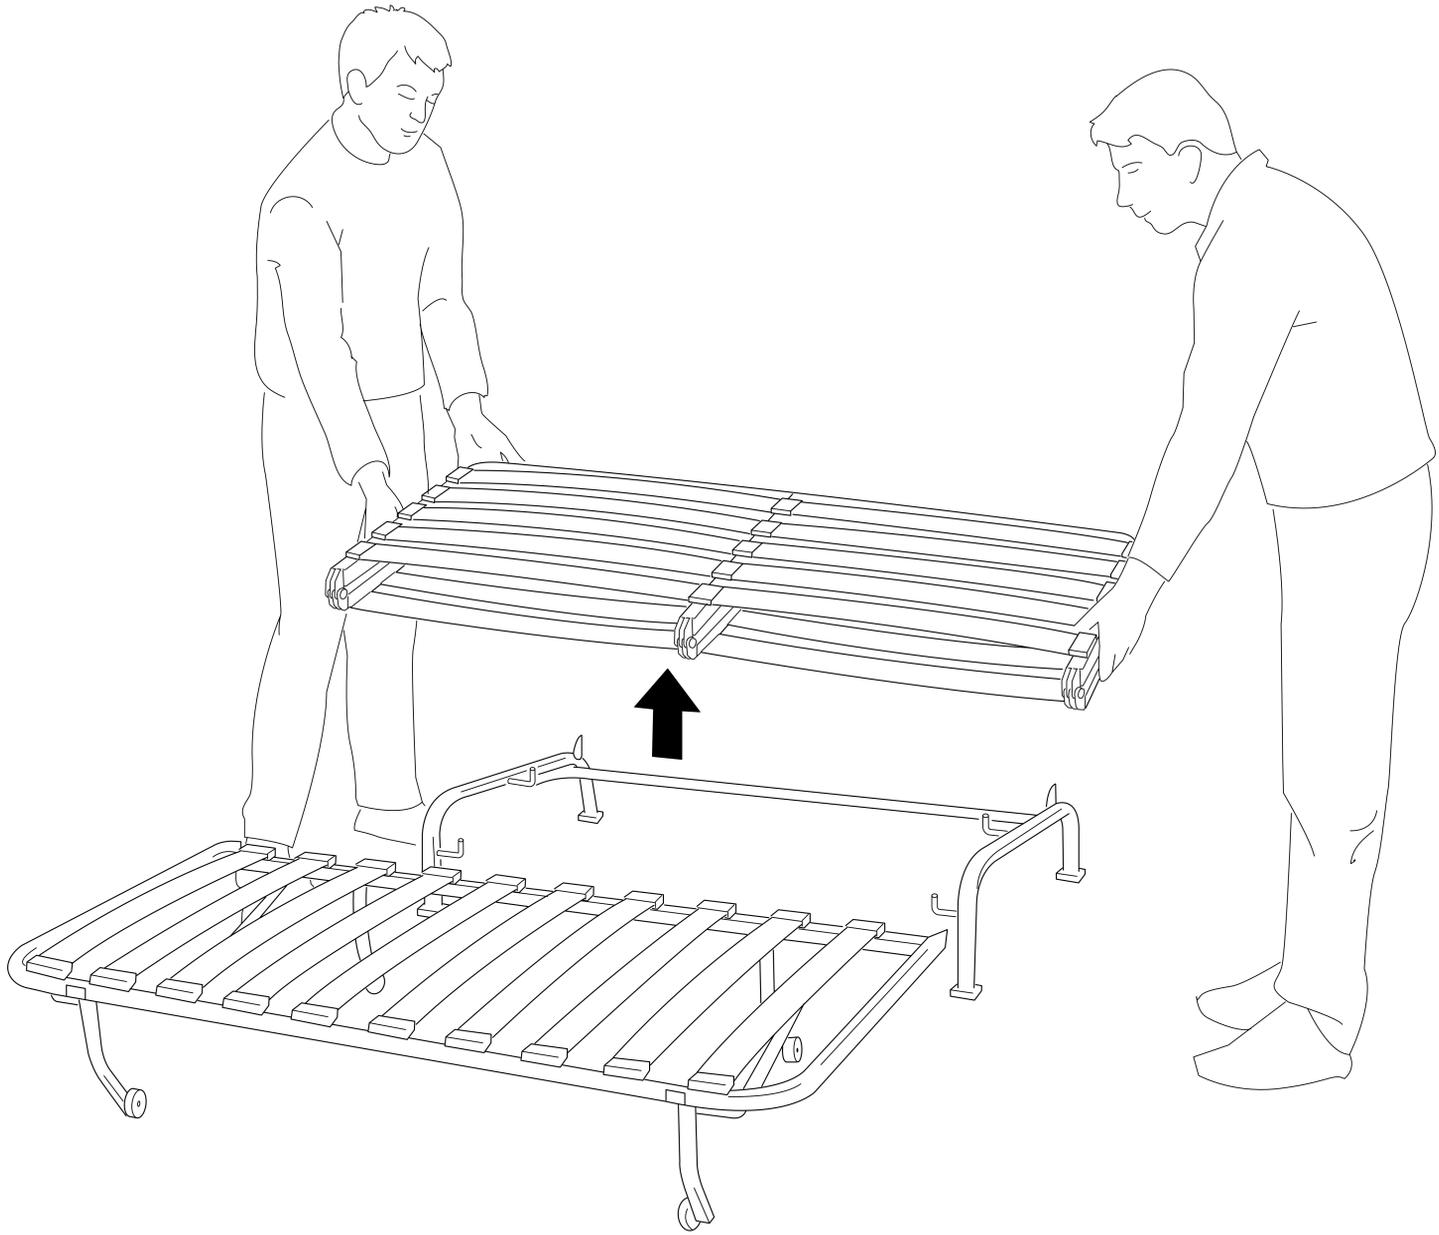


7

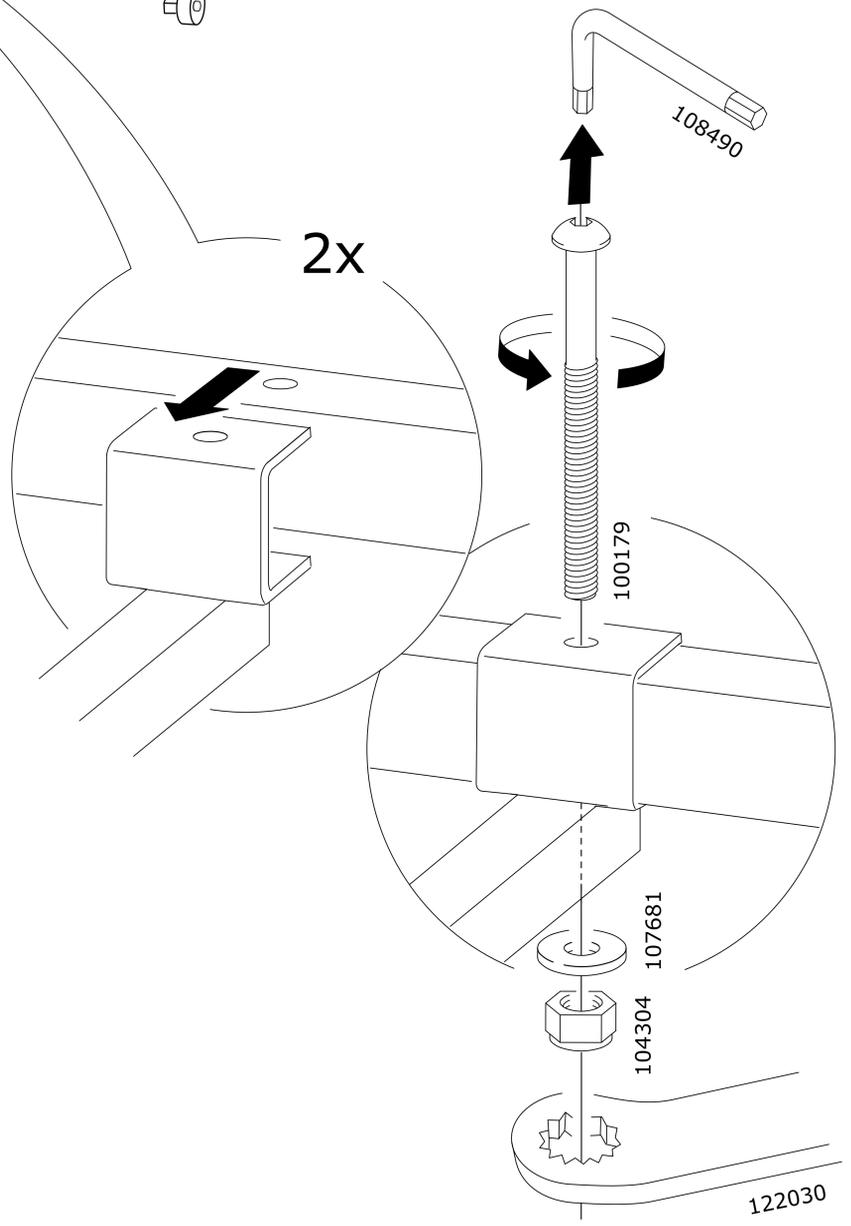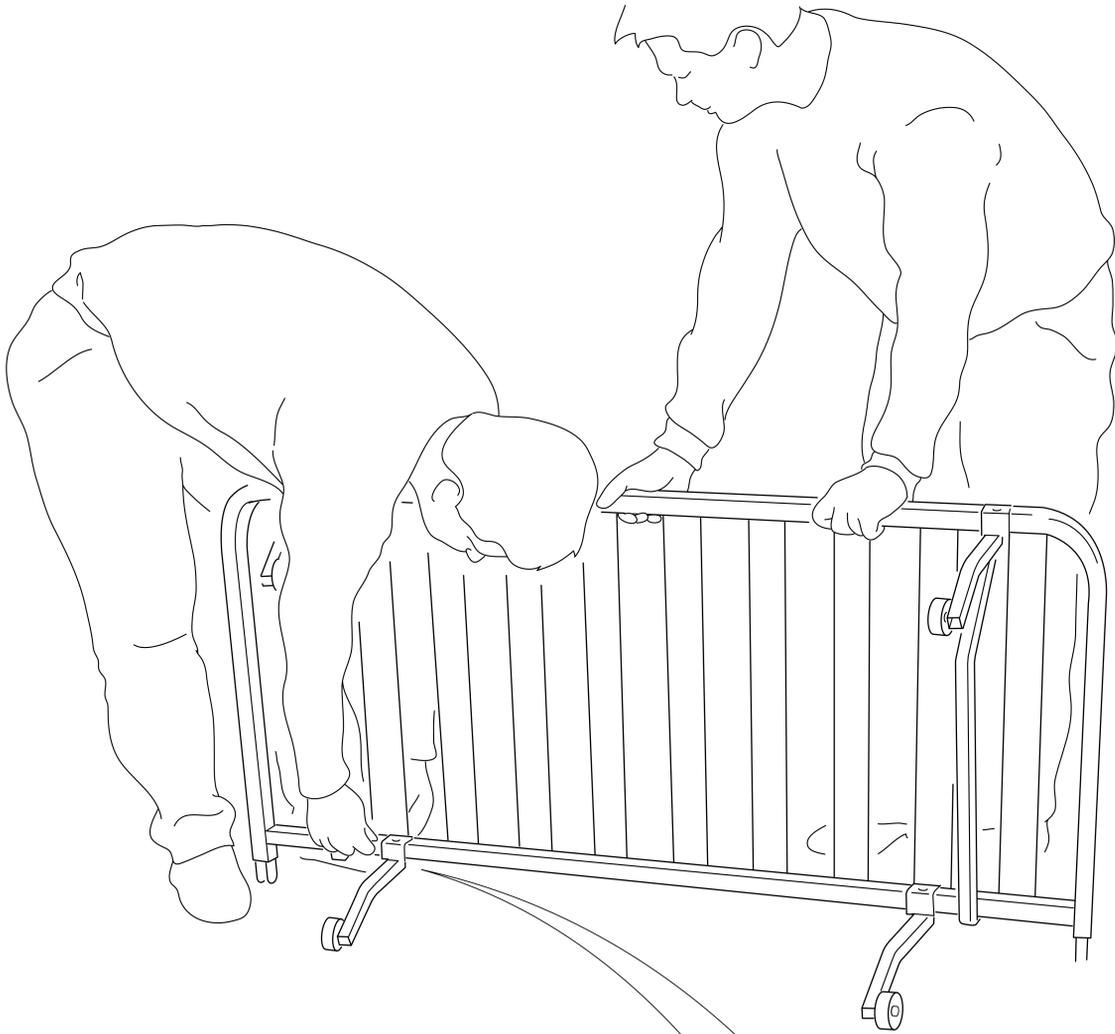


8

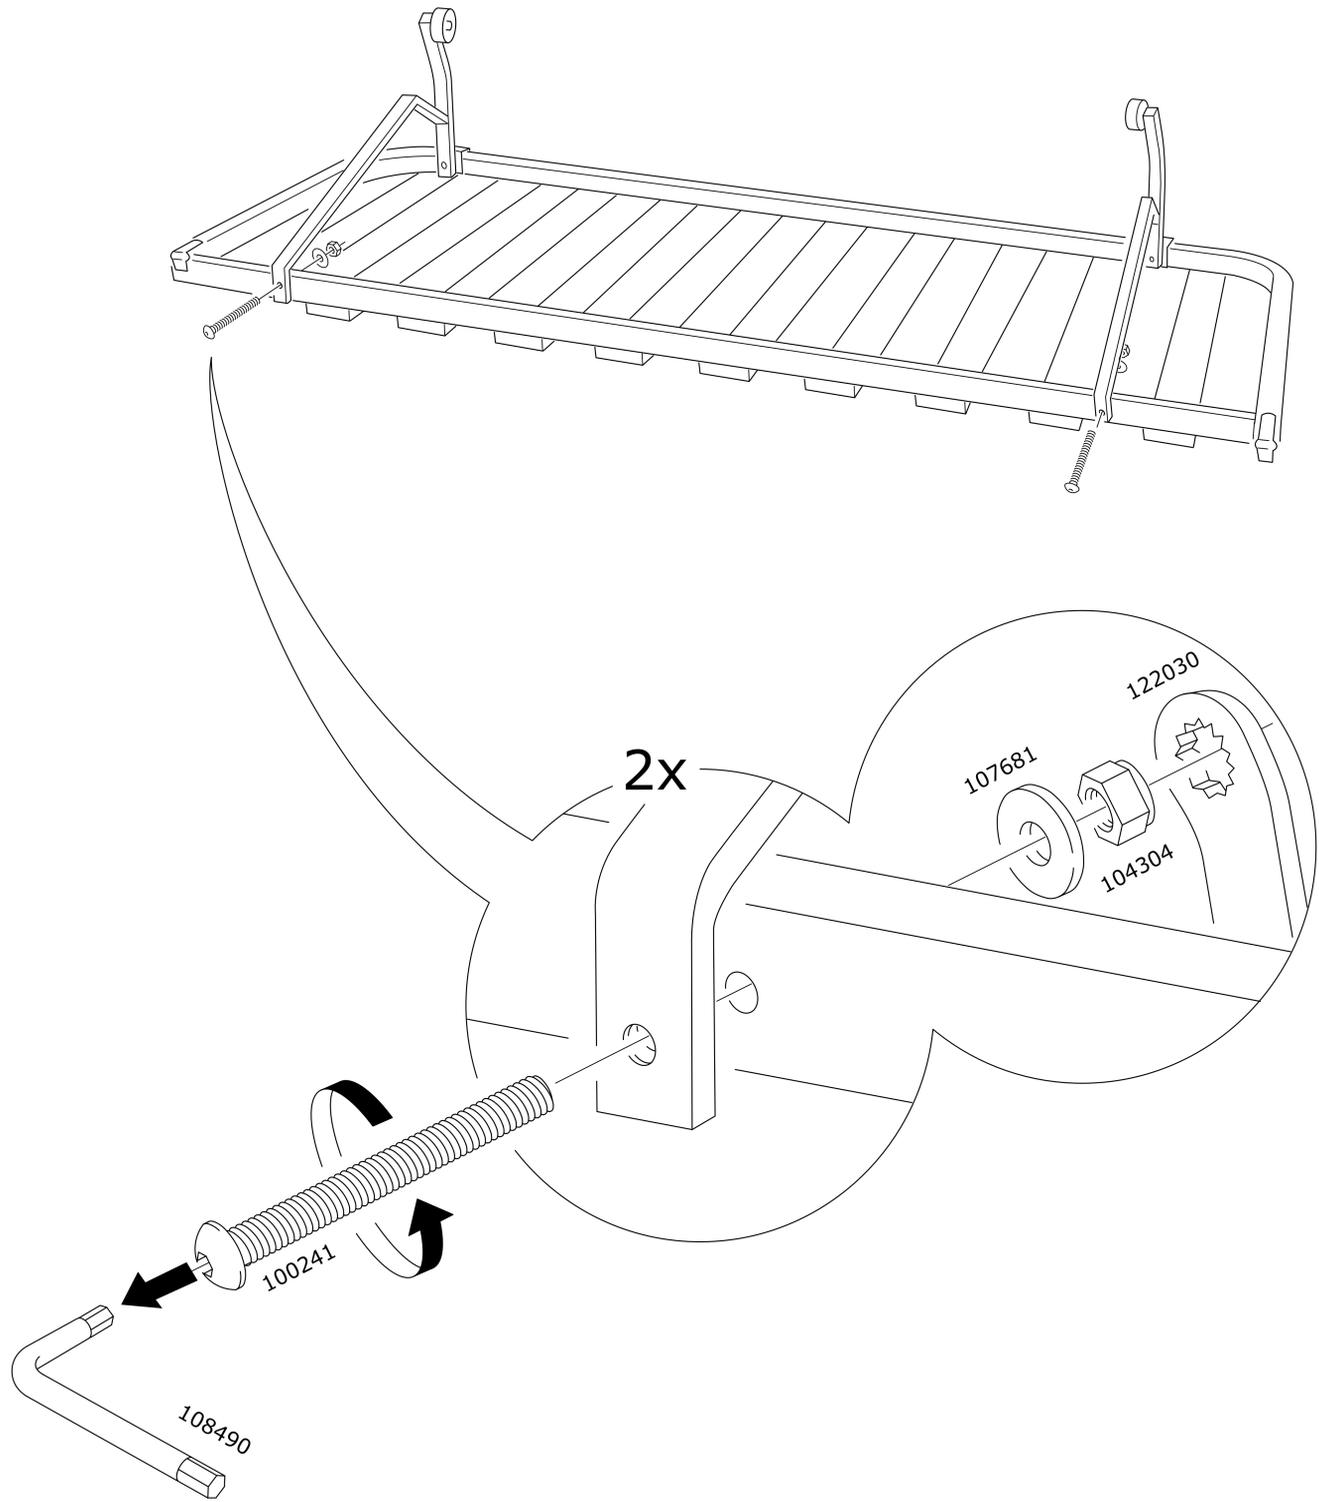

9

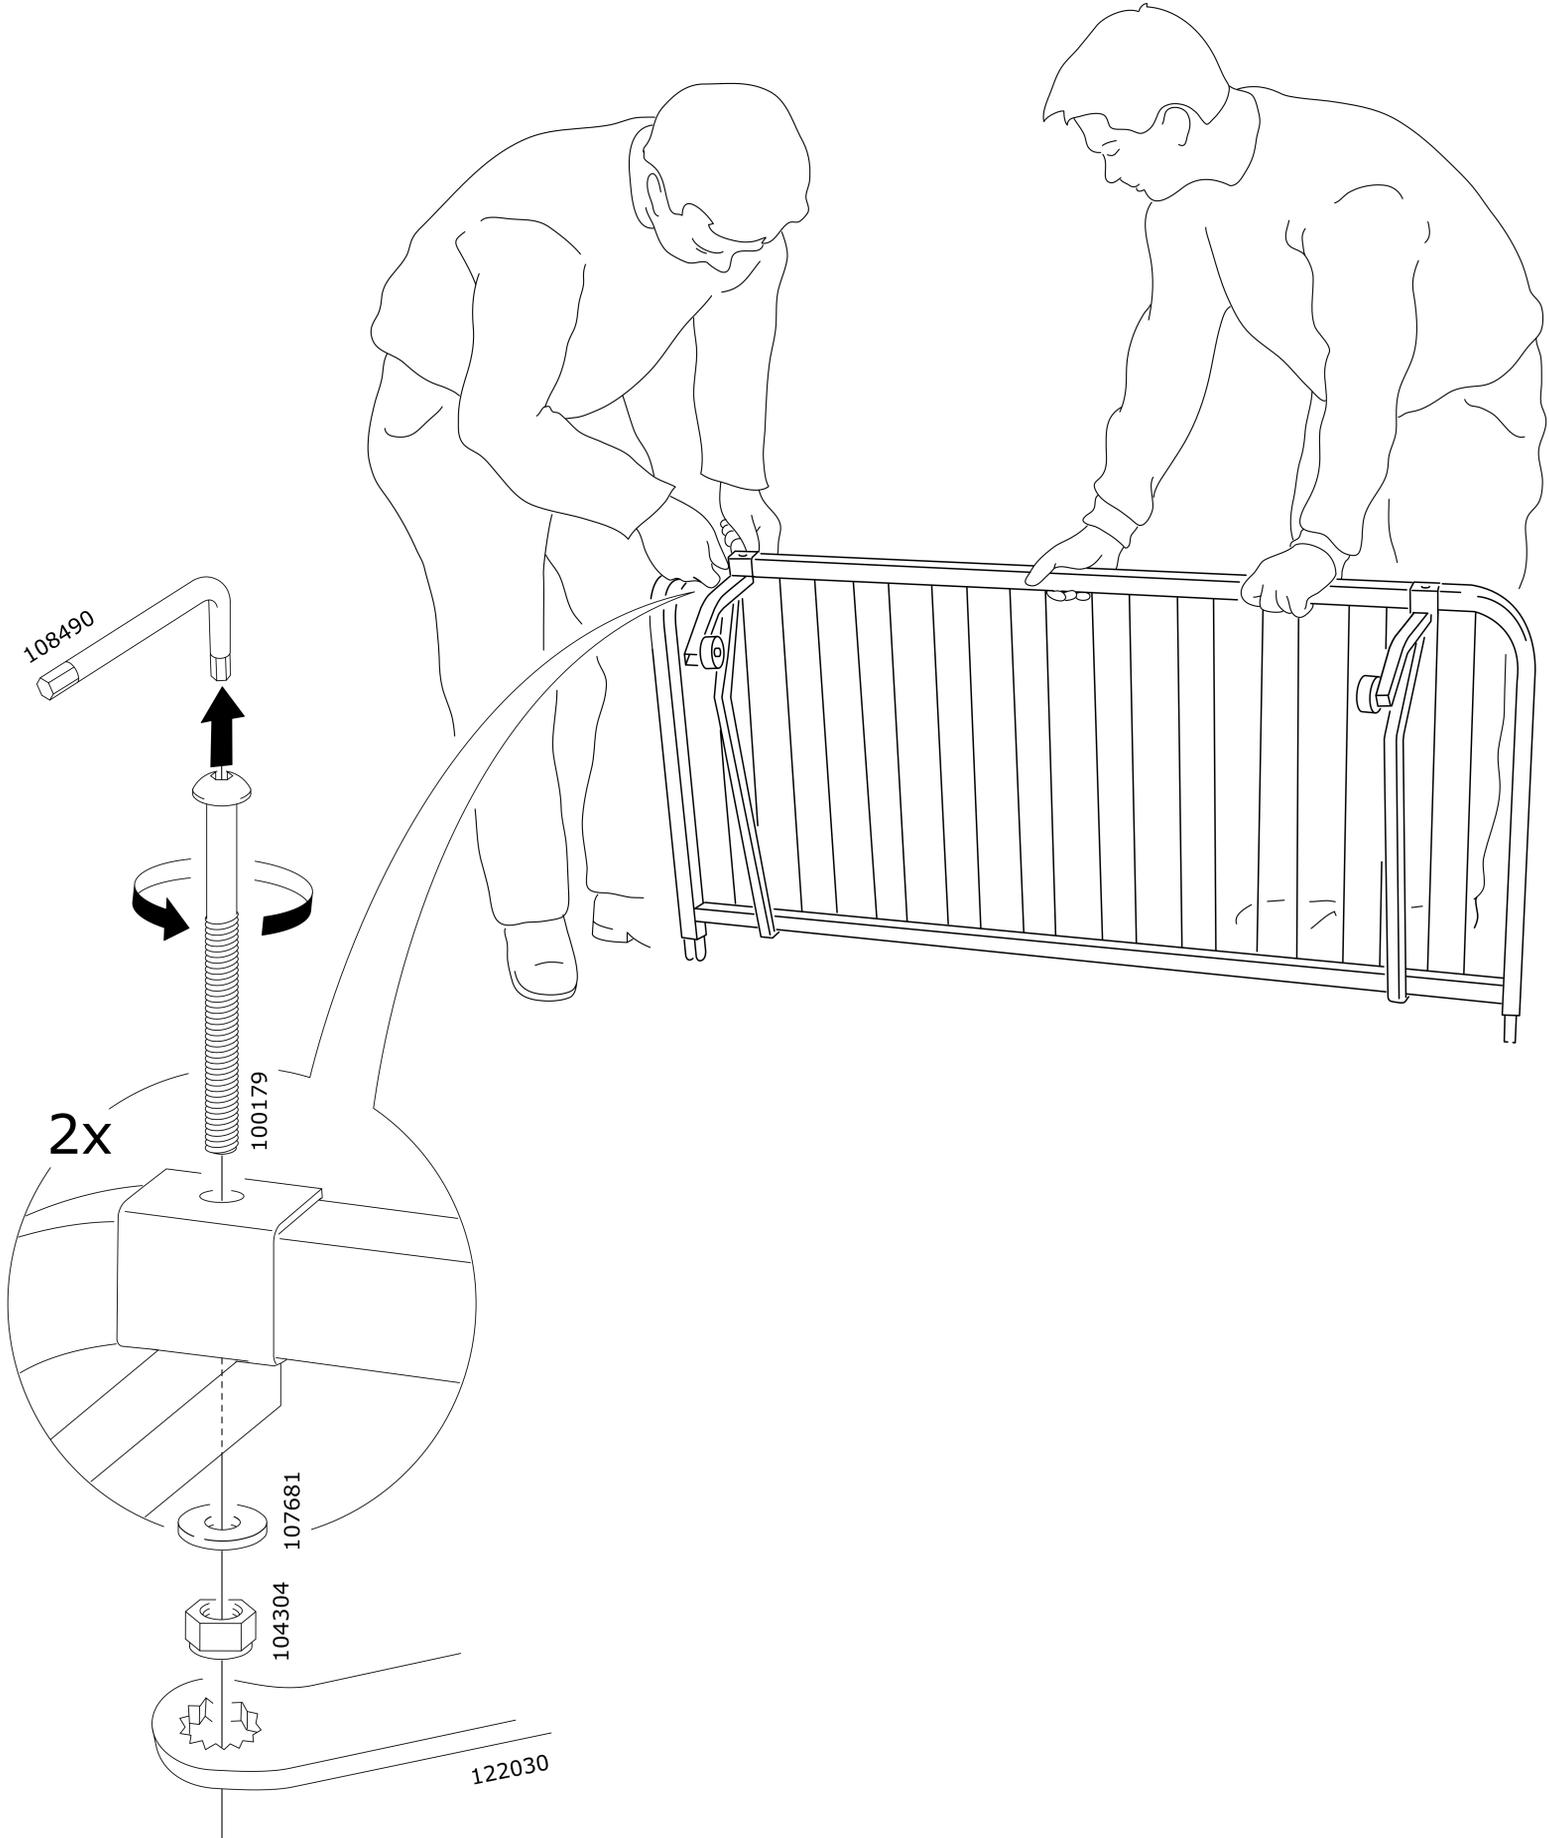


10

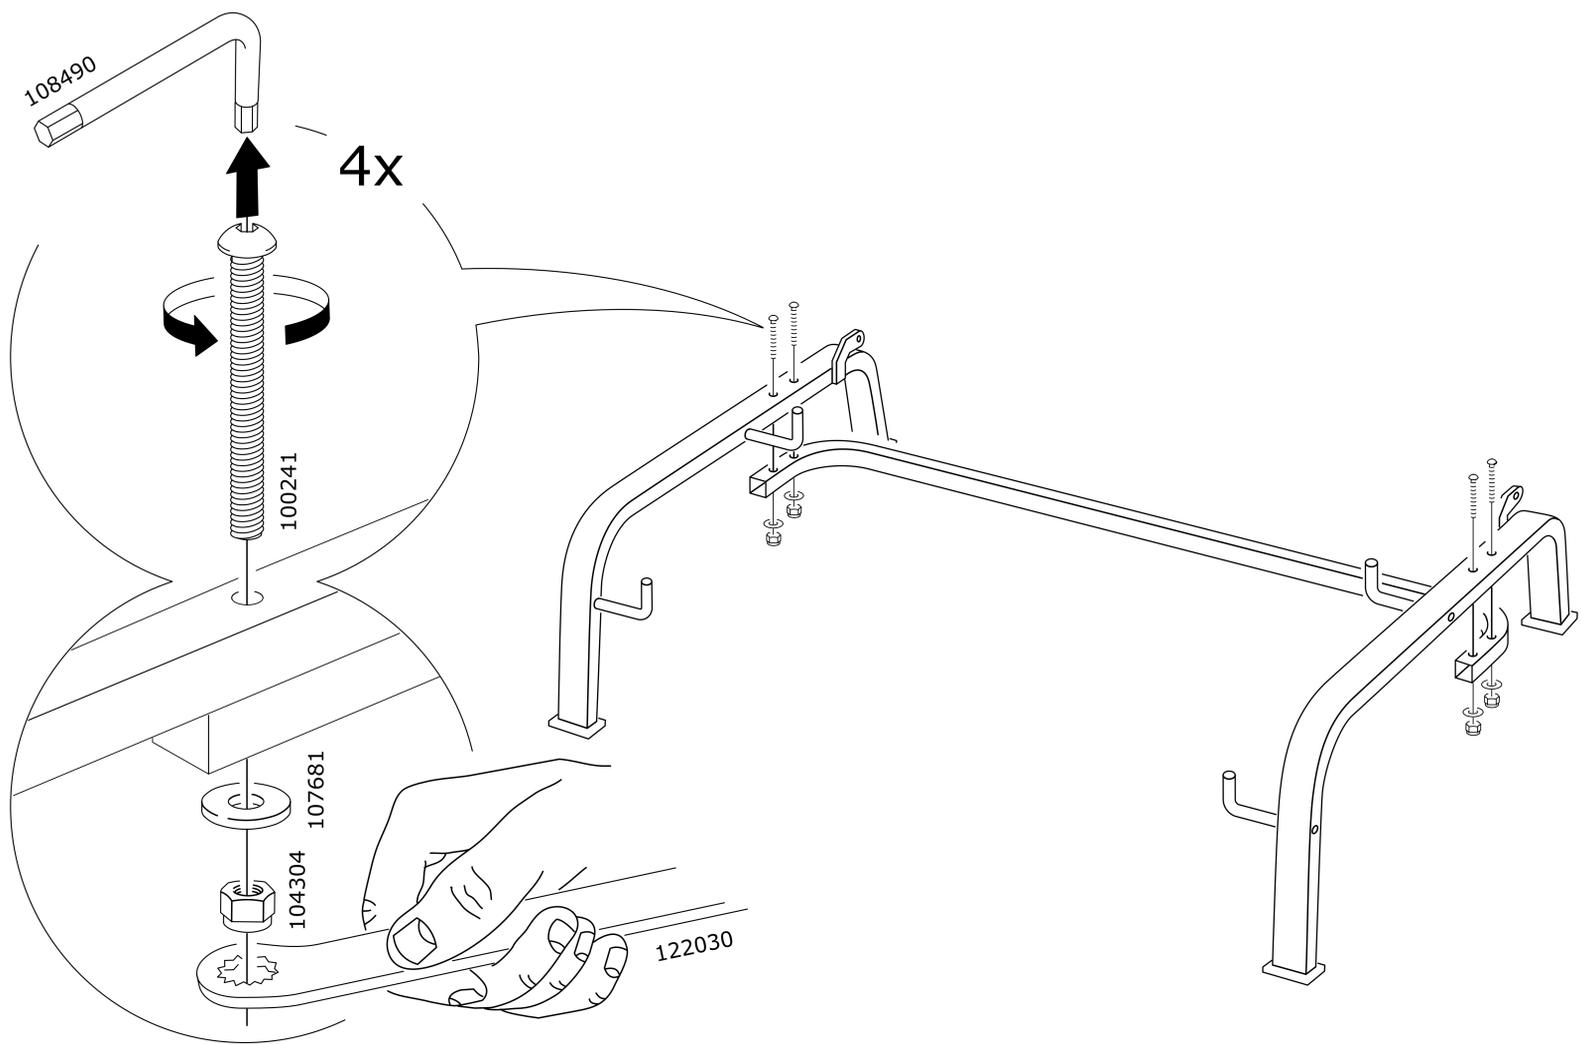

Here are all the parts you should have for your disassembled LYCKSELE.

If any screws or bolts are missing, you can pick up free replacements in-store.

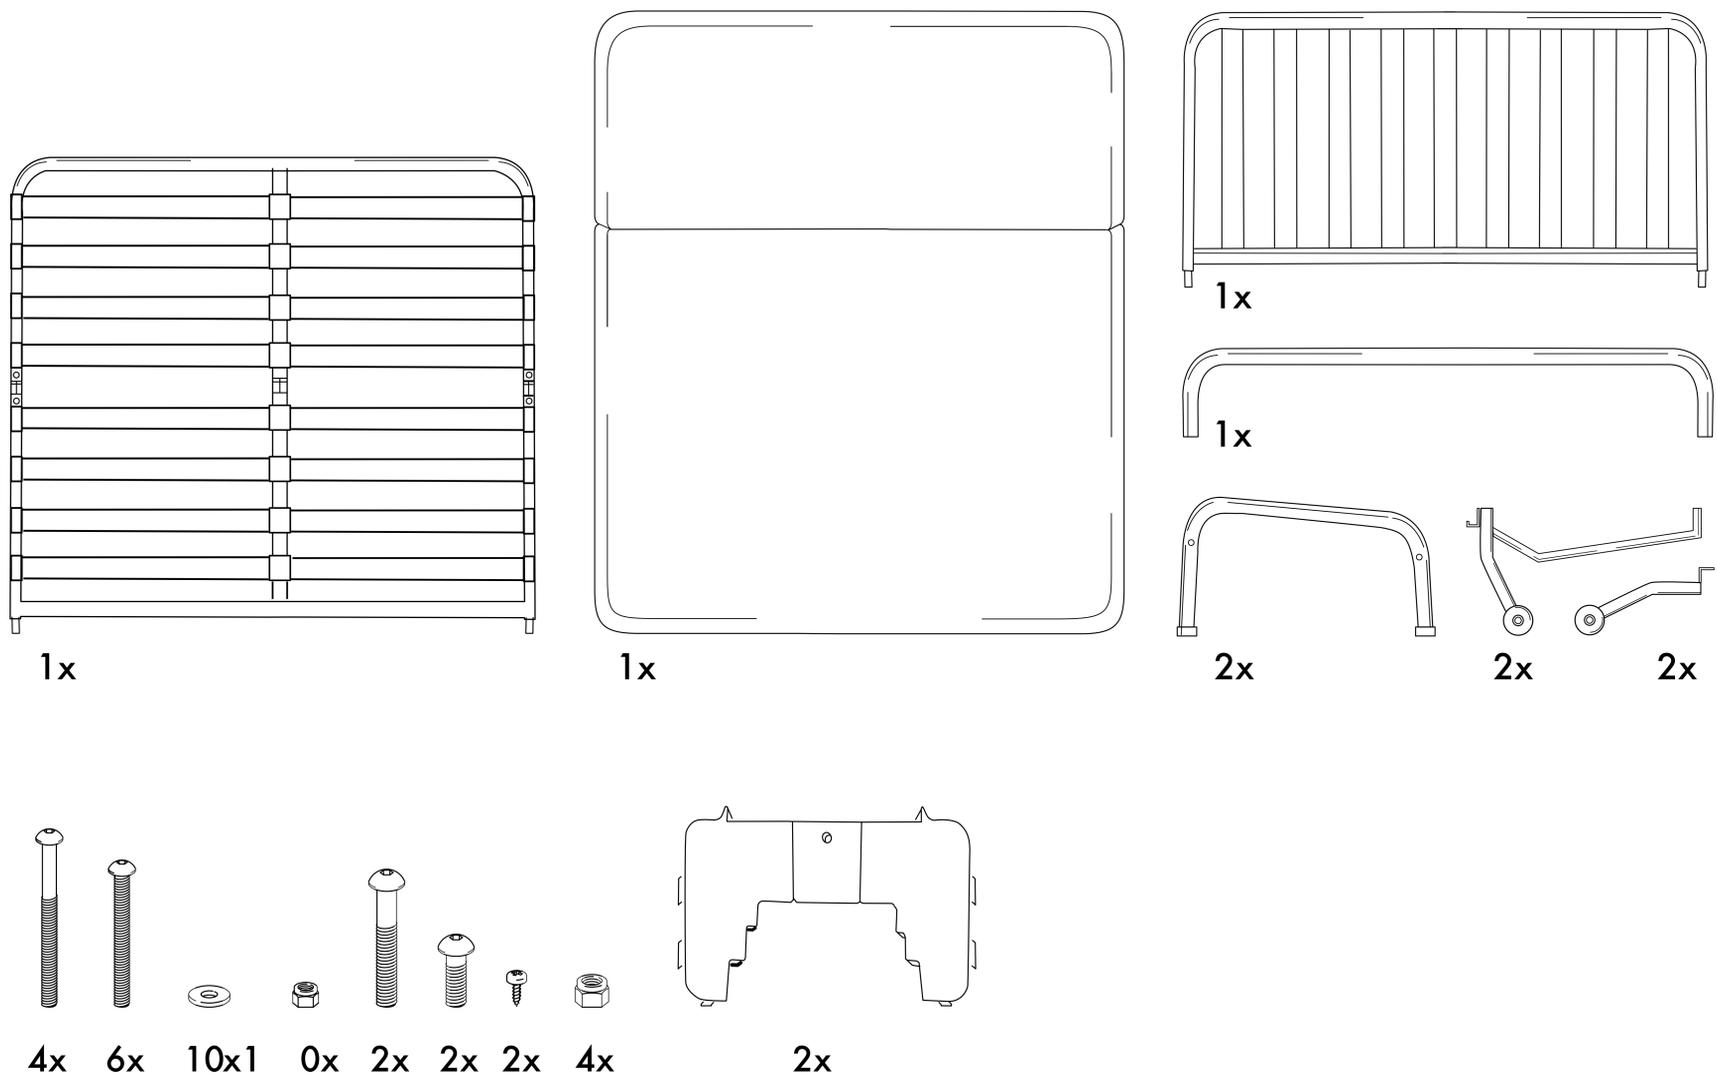

OUR COMMITMENT TO SUSTAINABILITY

Helping you disassemble your furniture to extend its life is just one of the ways we're lowering our impact on the environment.

See more at www.ikea.com/gb/en/this-is-ikea/sustainable-everyday



THE WONDERFUL EVERYDAY