

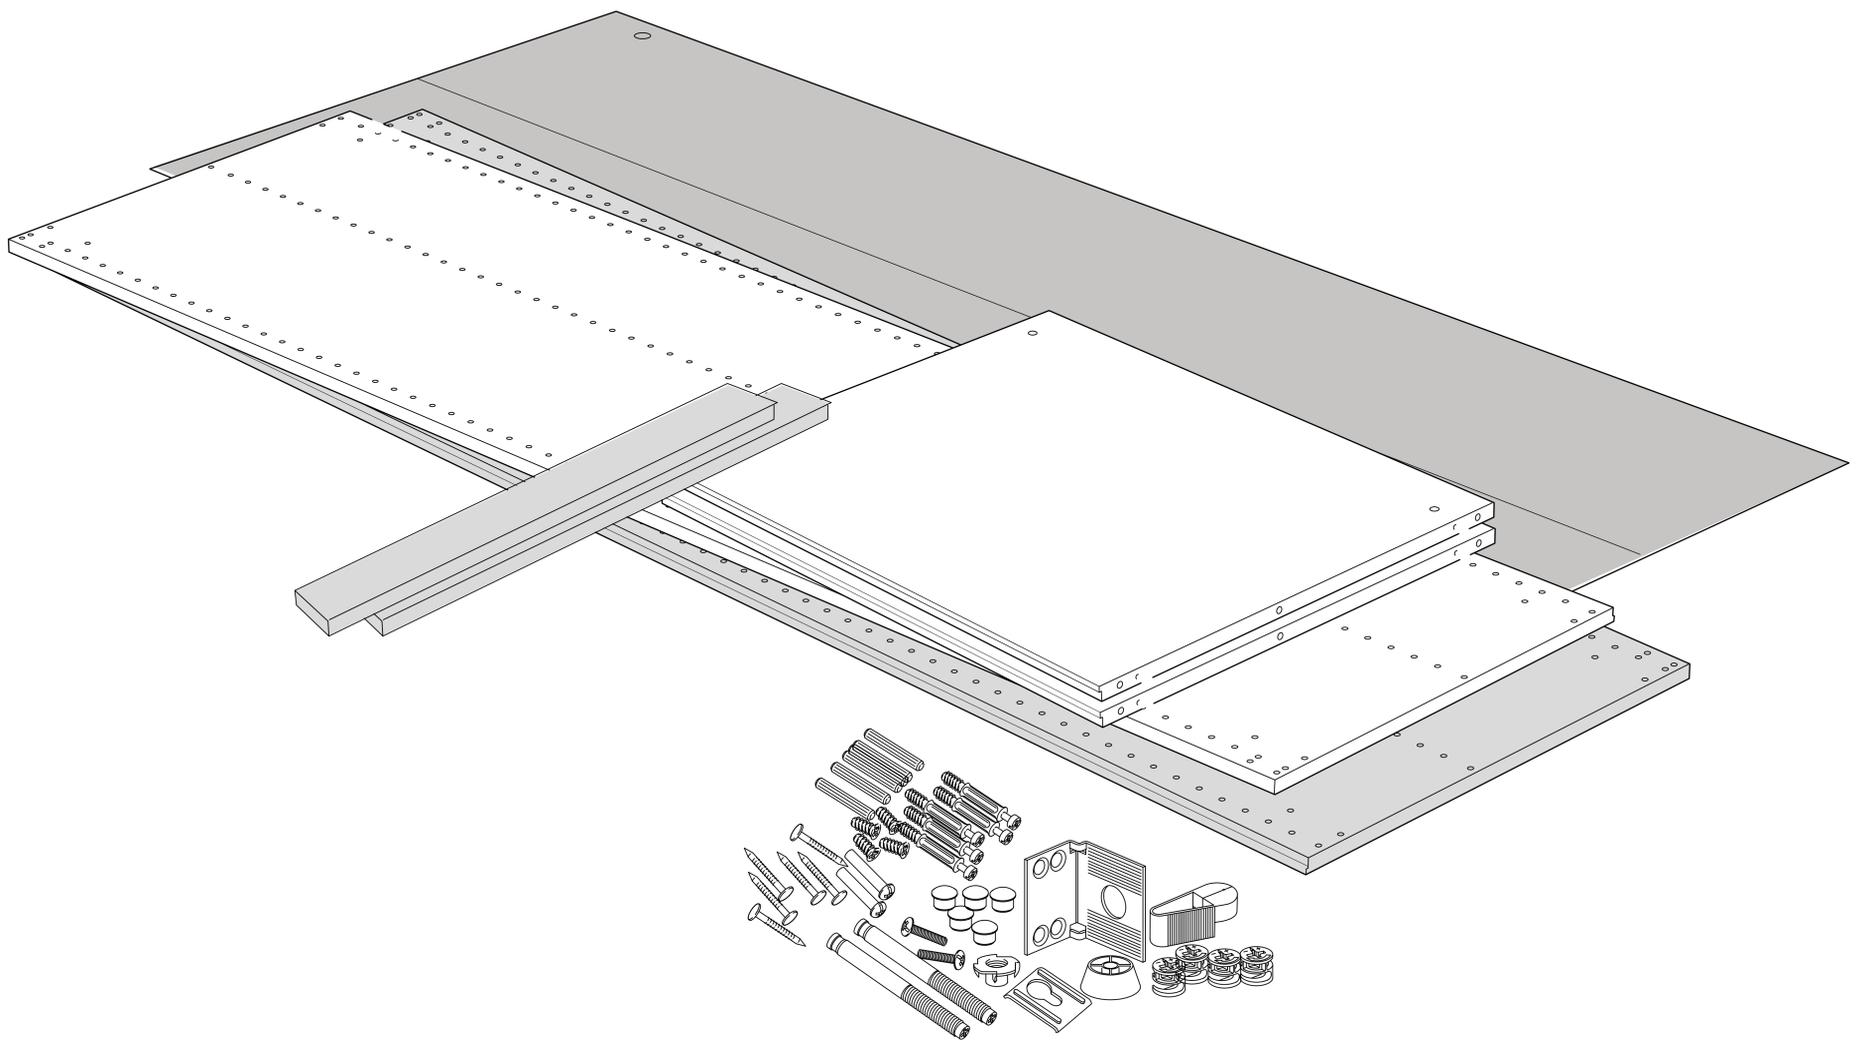
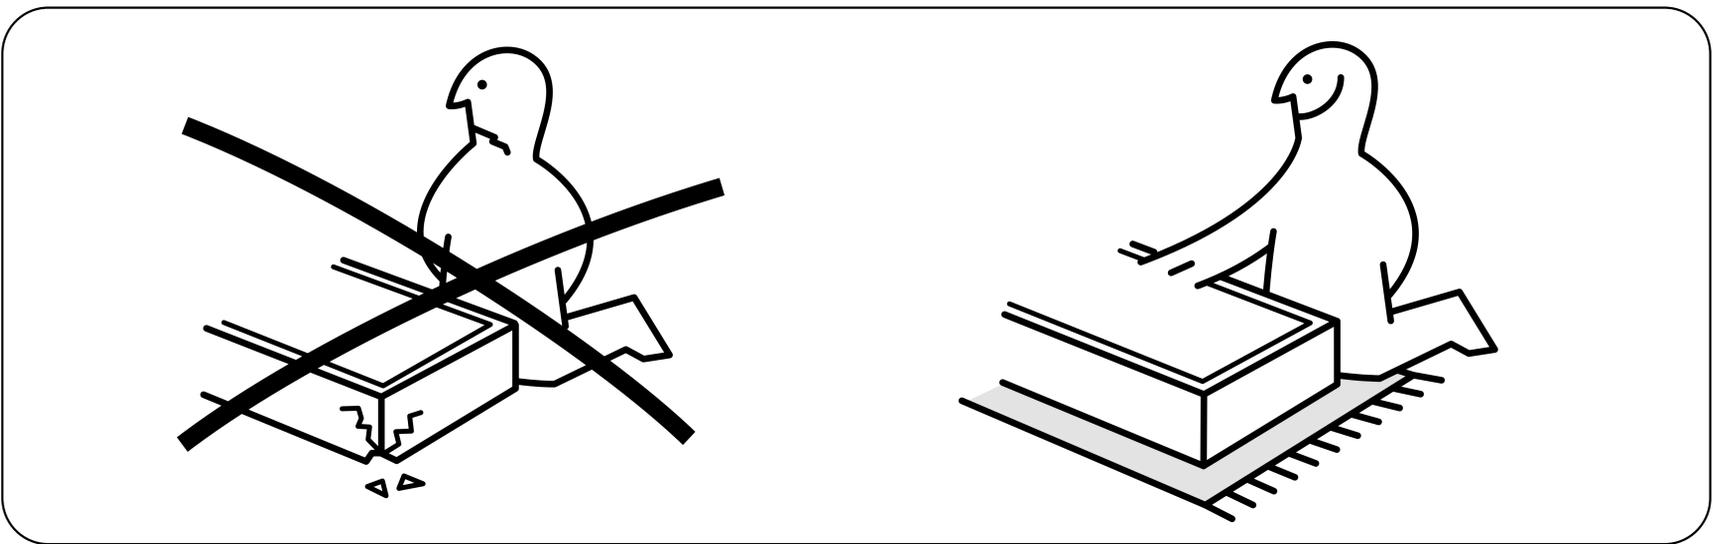


PAX


DISASSEMBLY INSTRUCTIONS

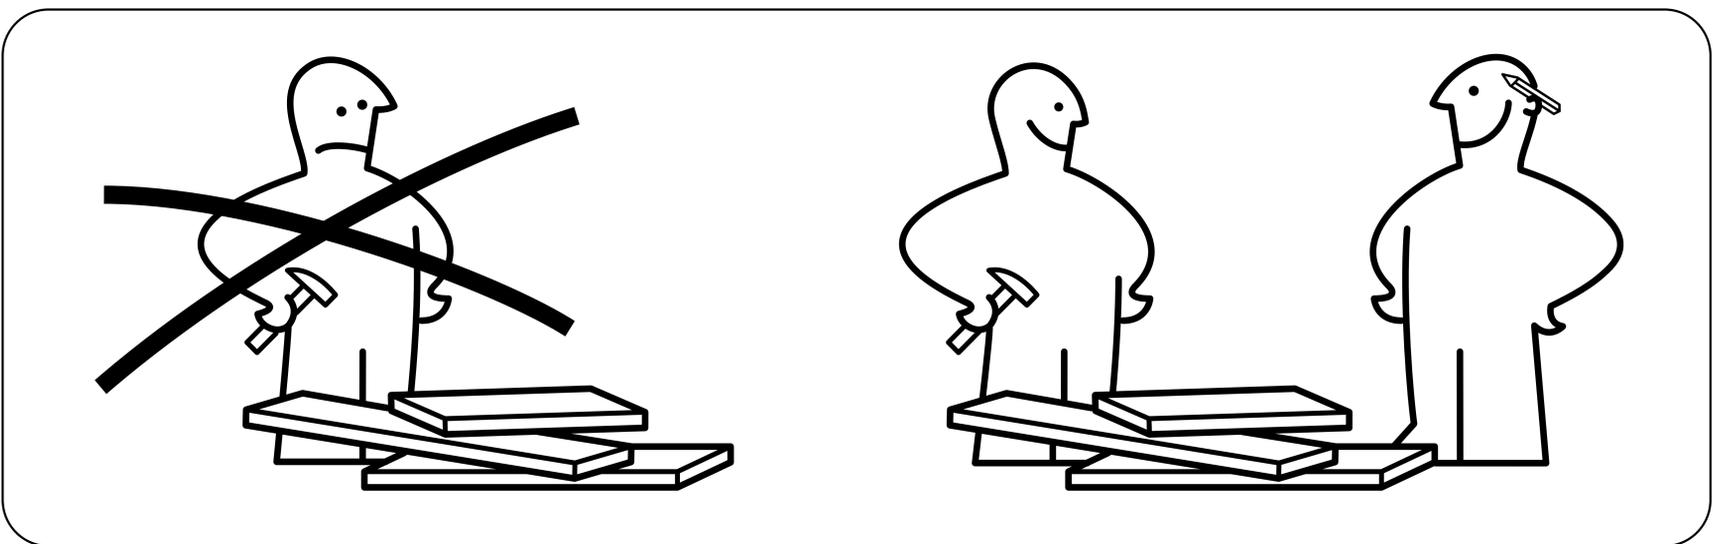


Design and Quality
IKEA of Sweden

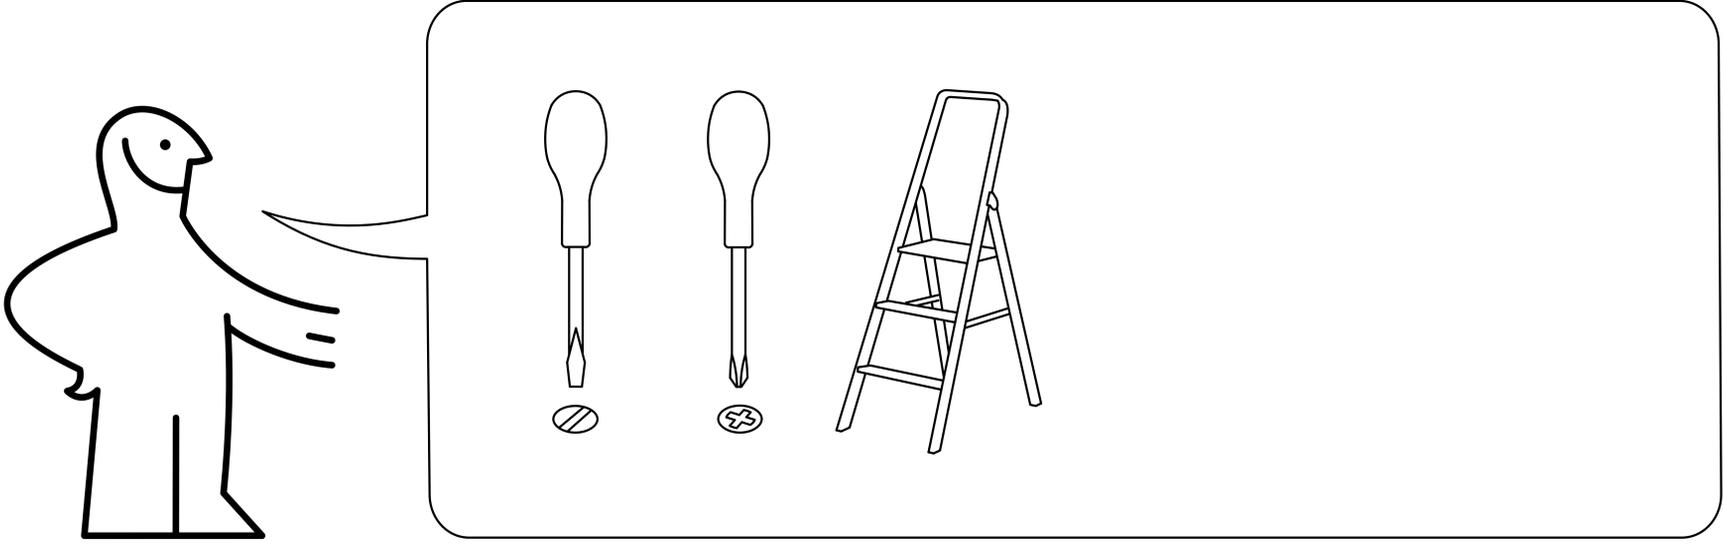


1

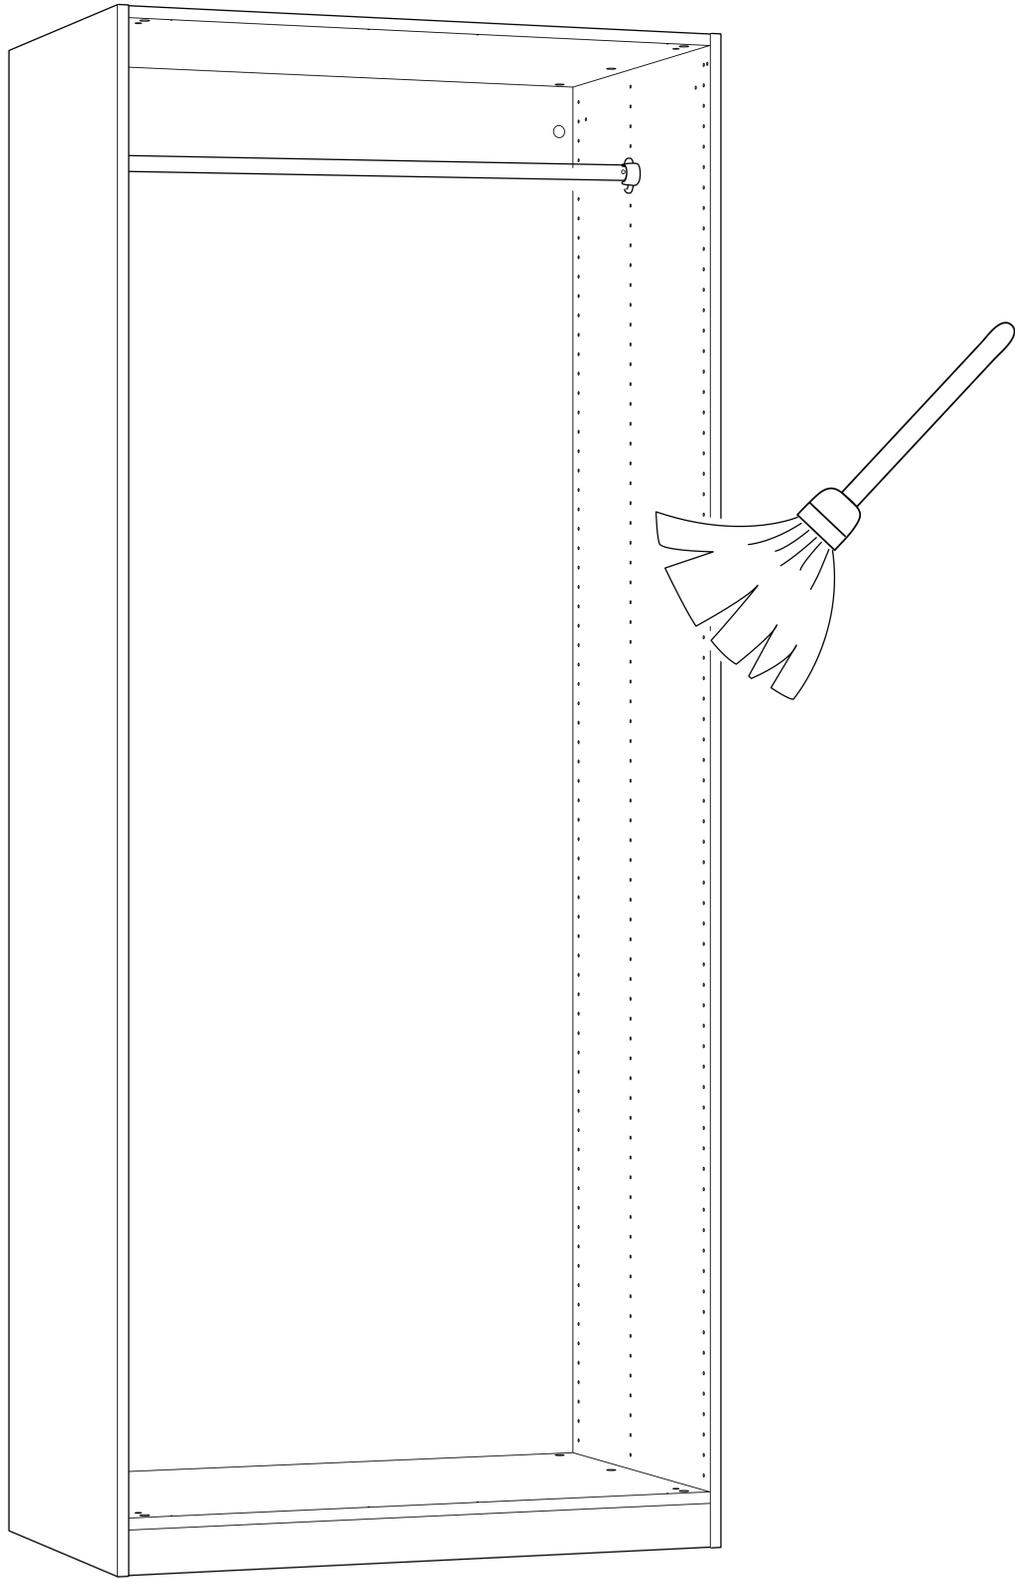


2

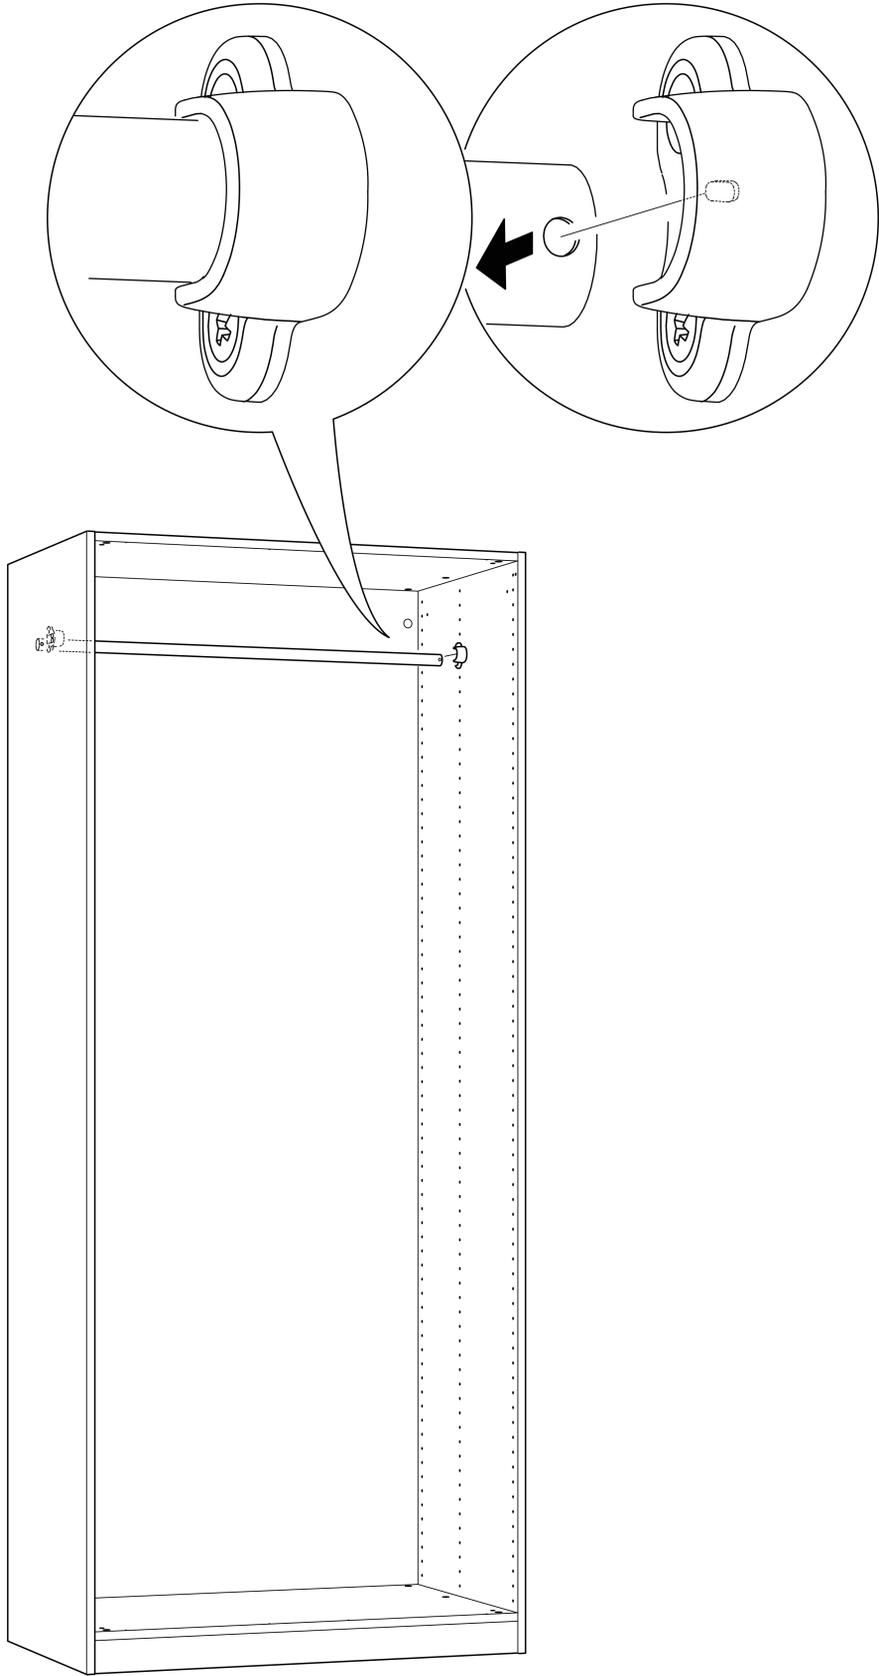


3

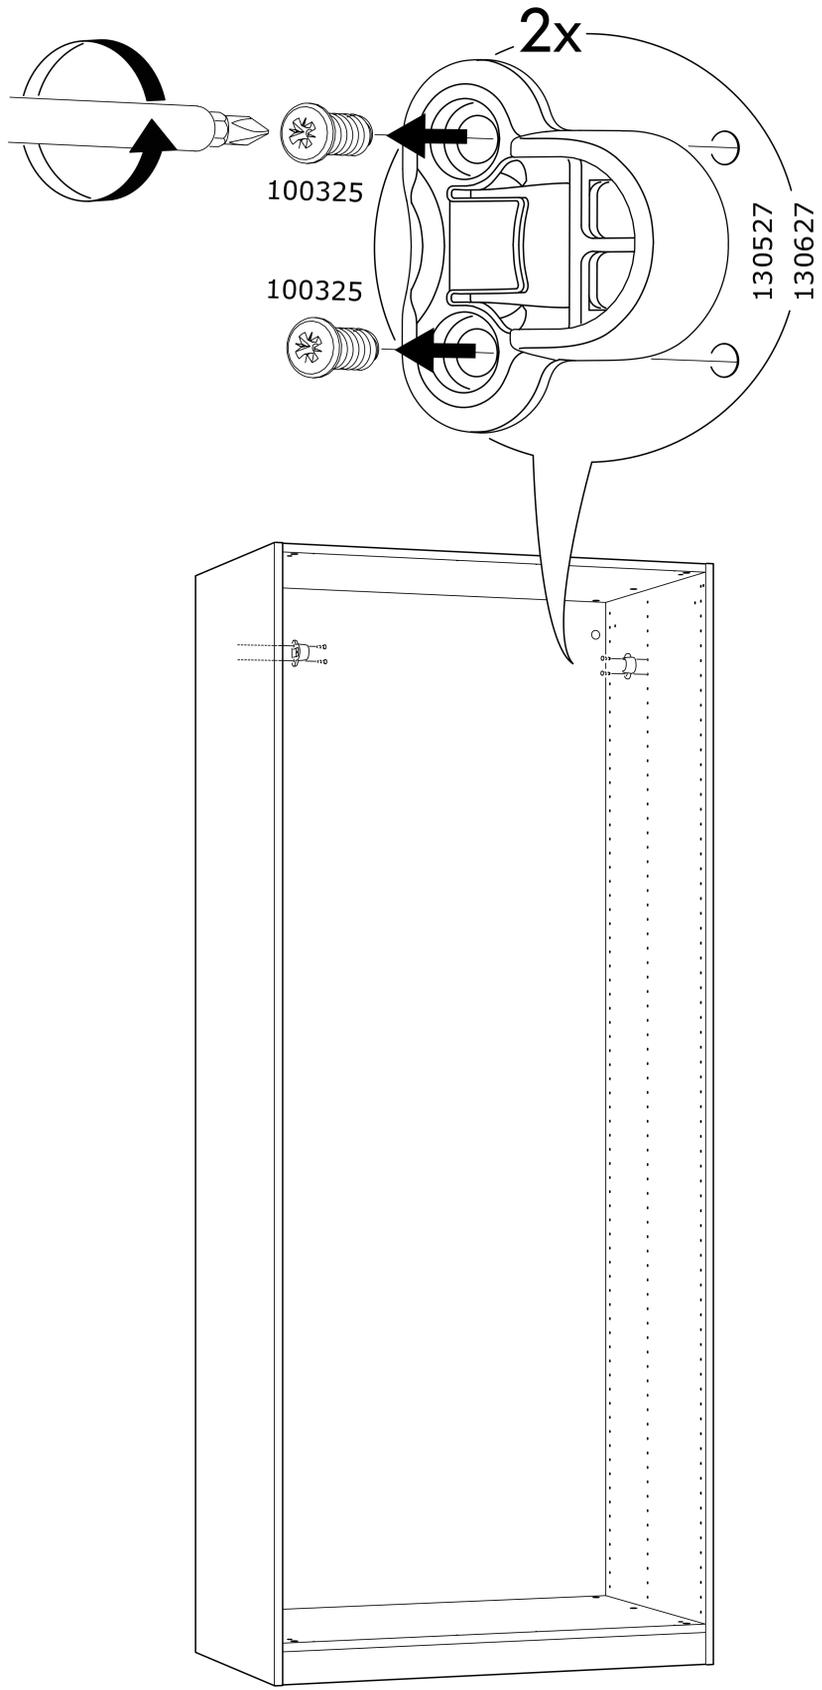



4

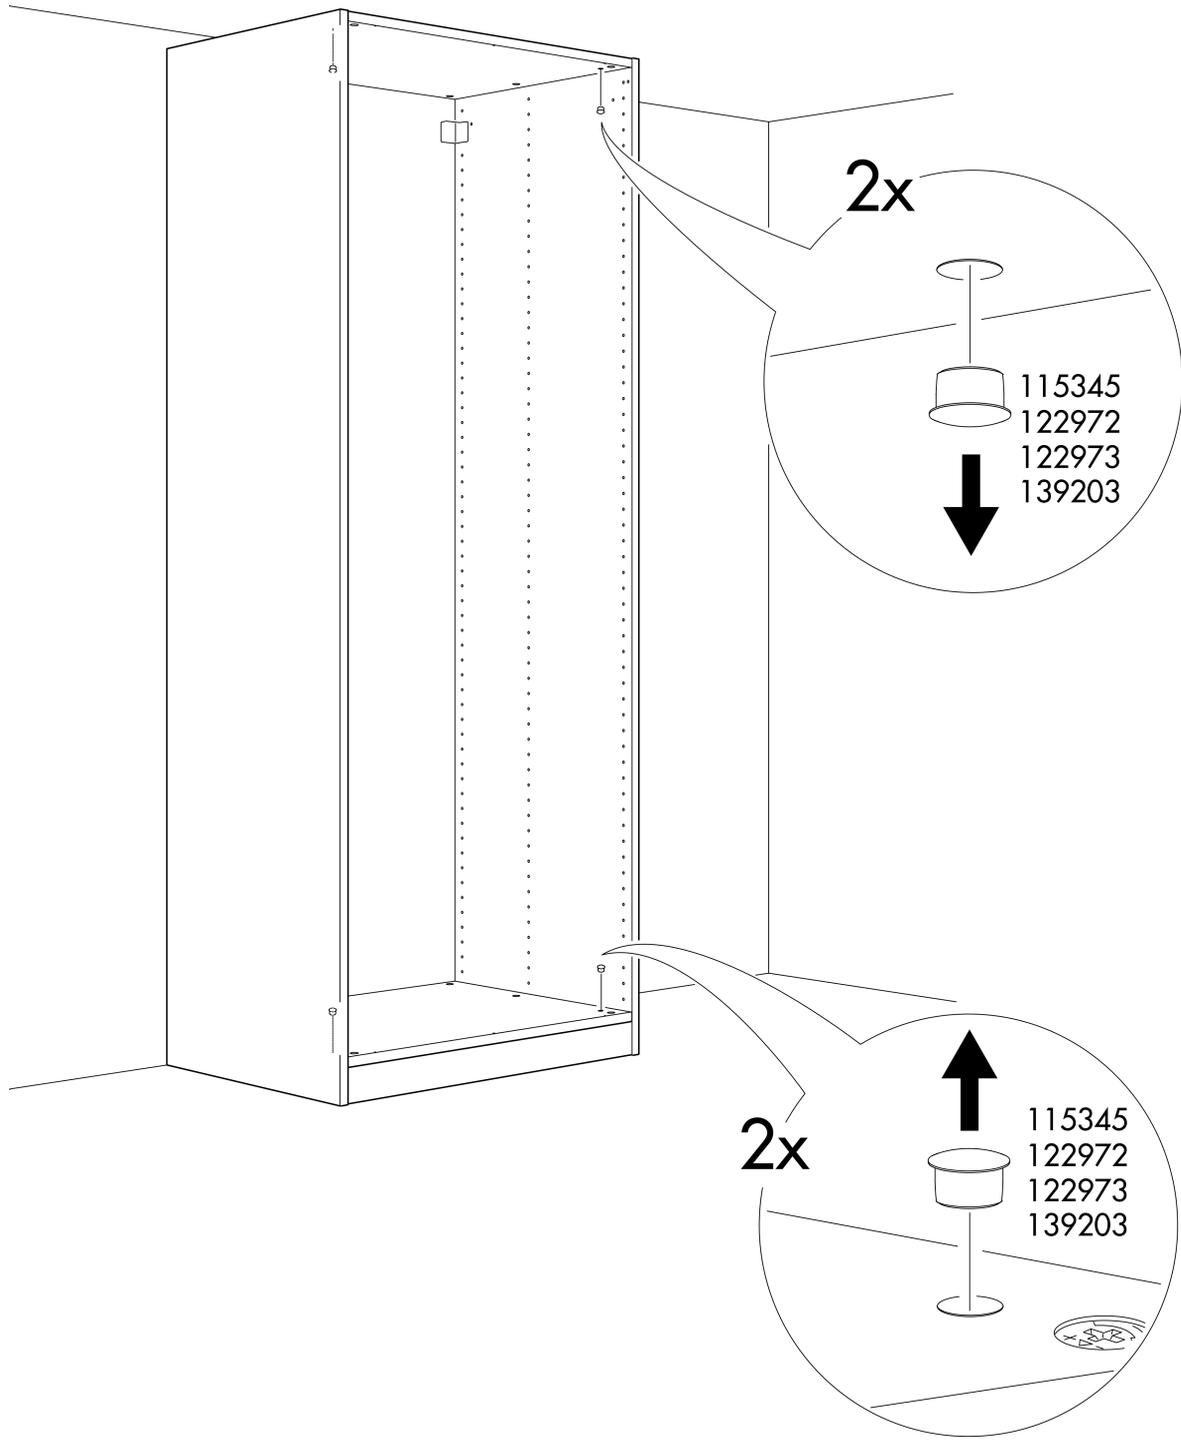


5

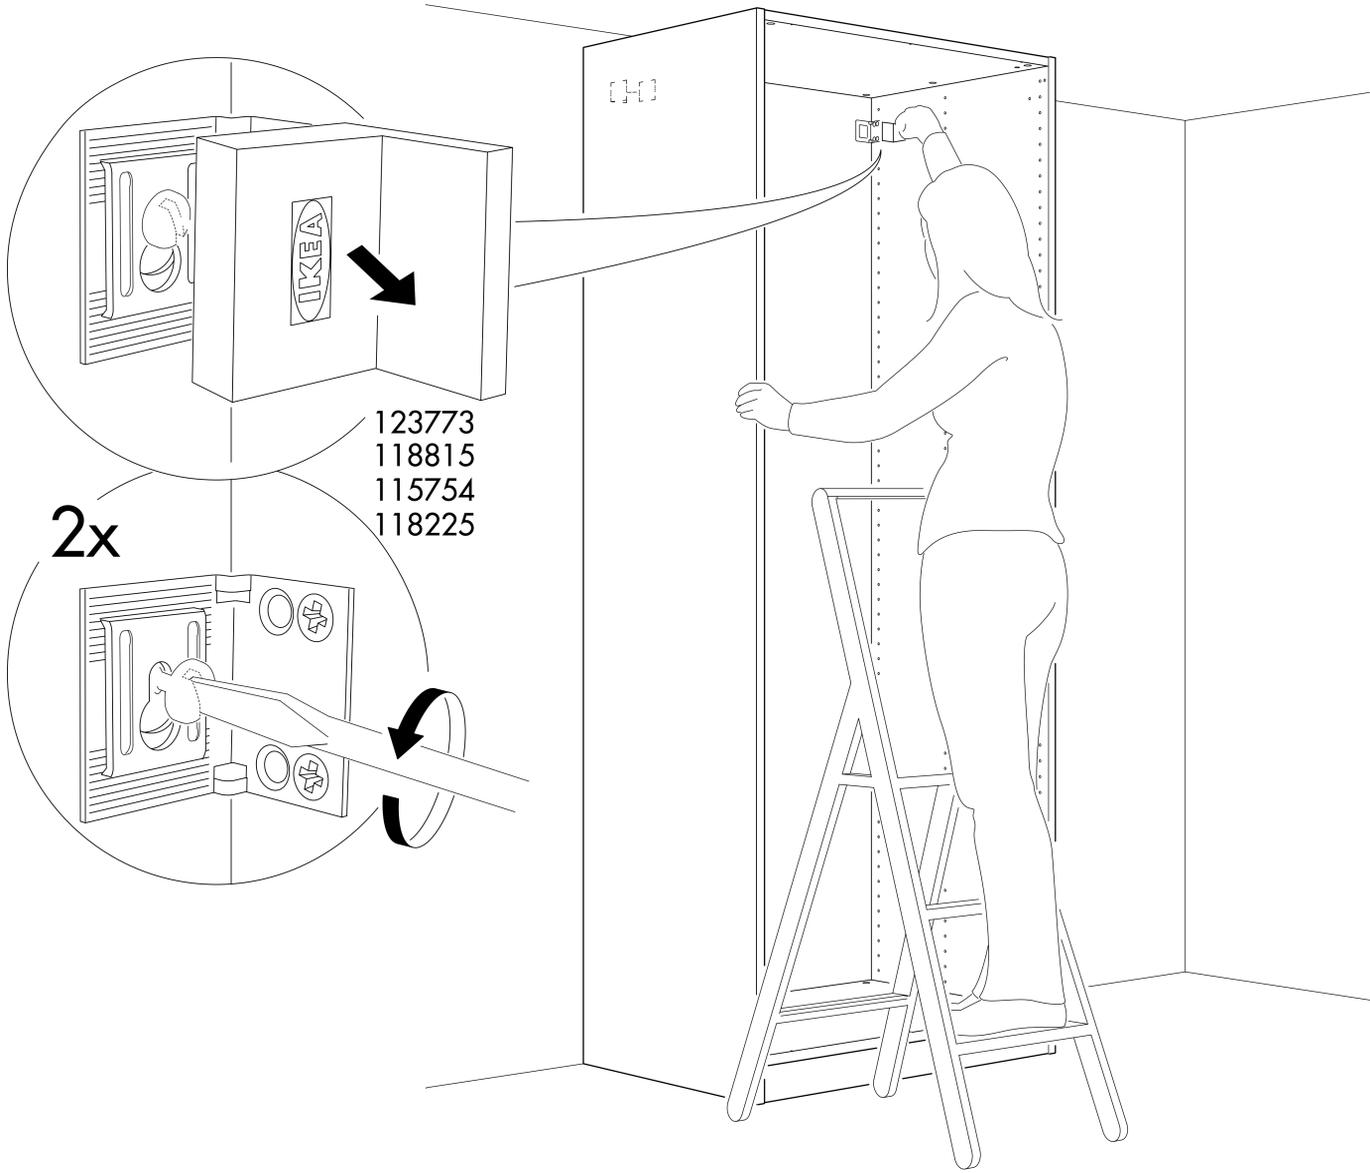


6

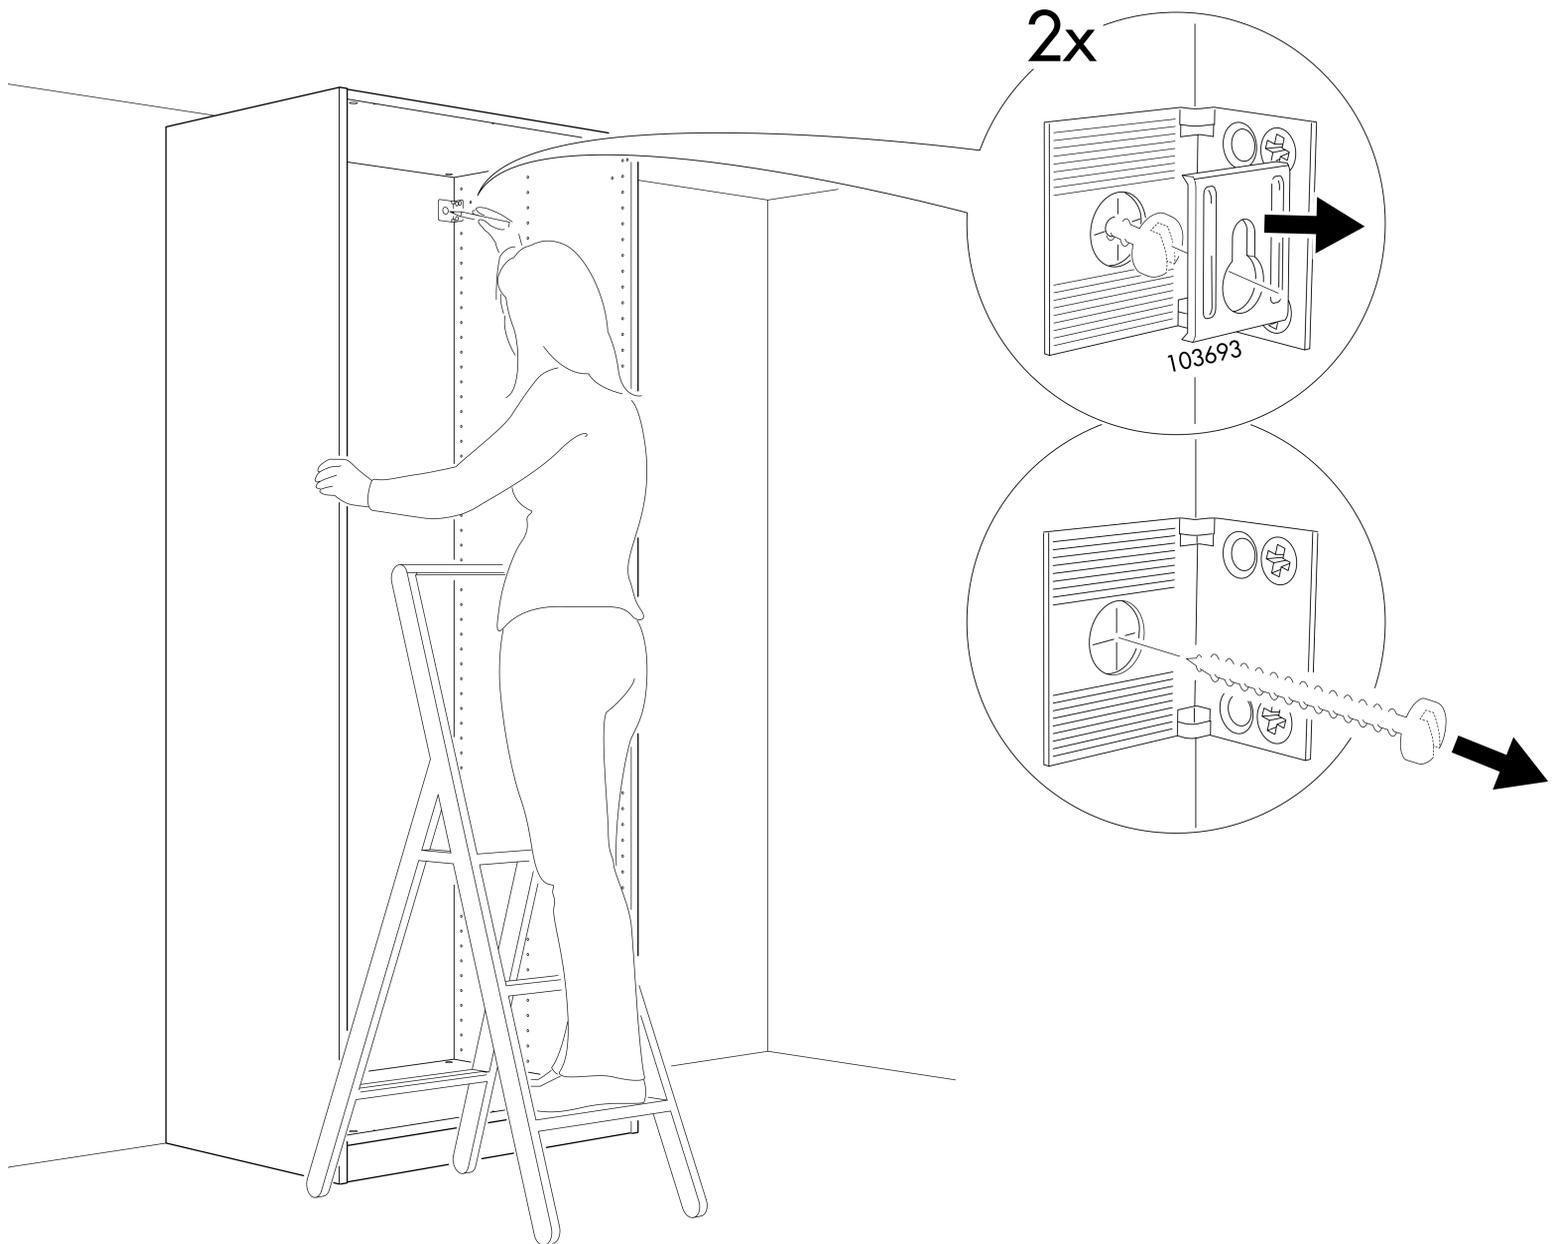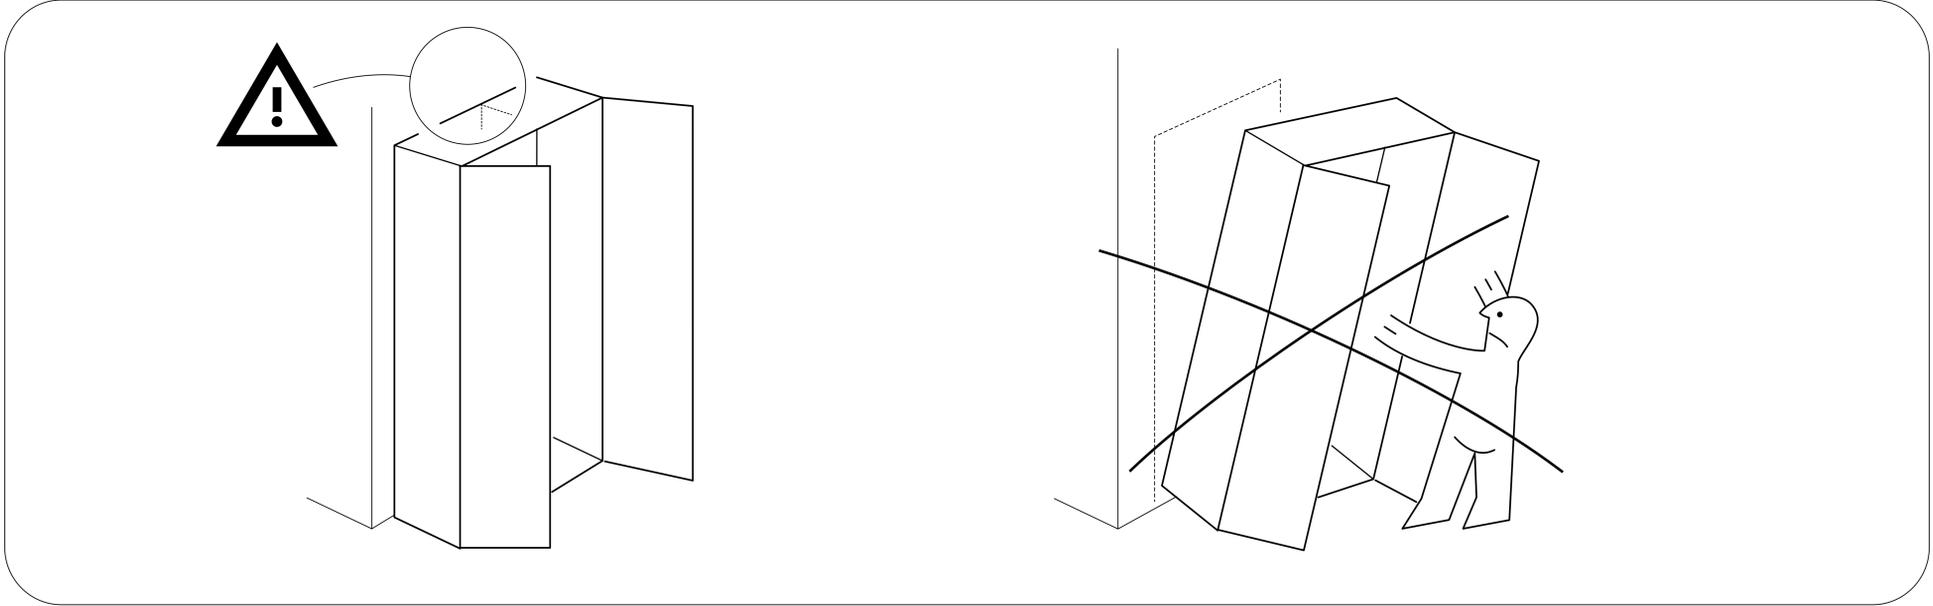




7

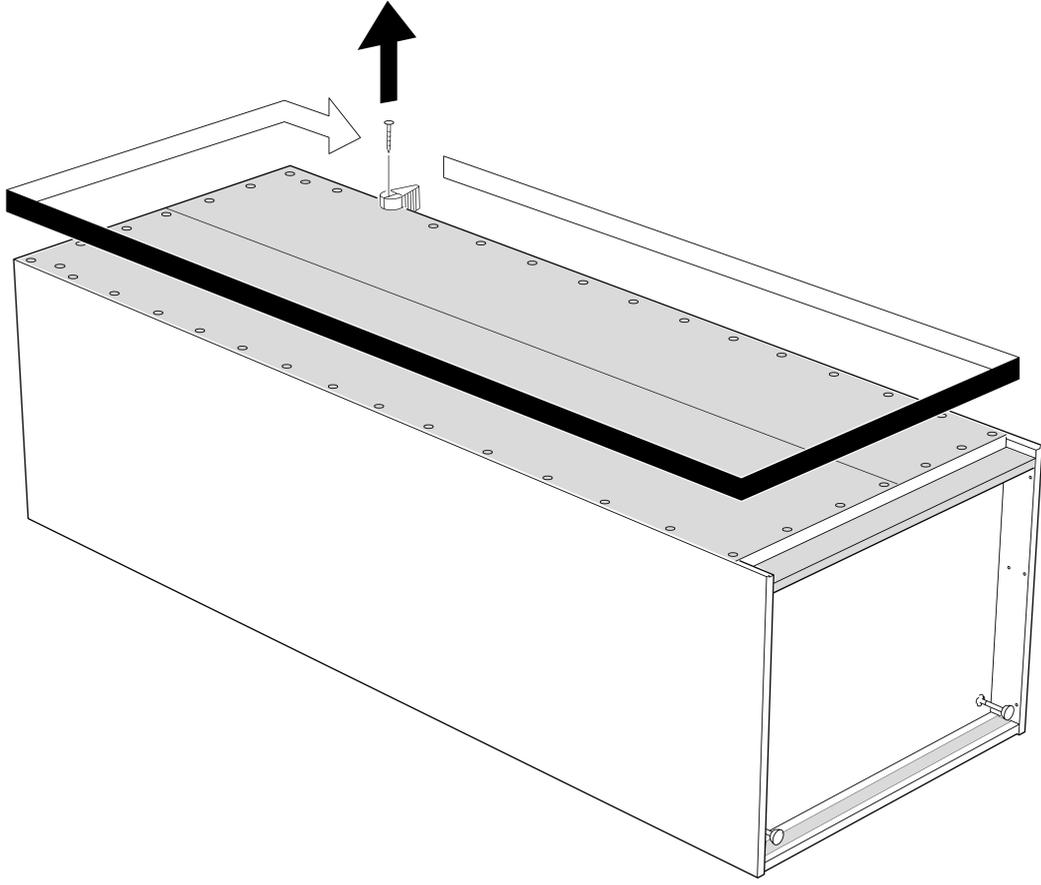


8

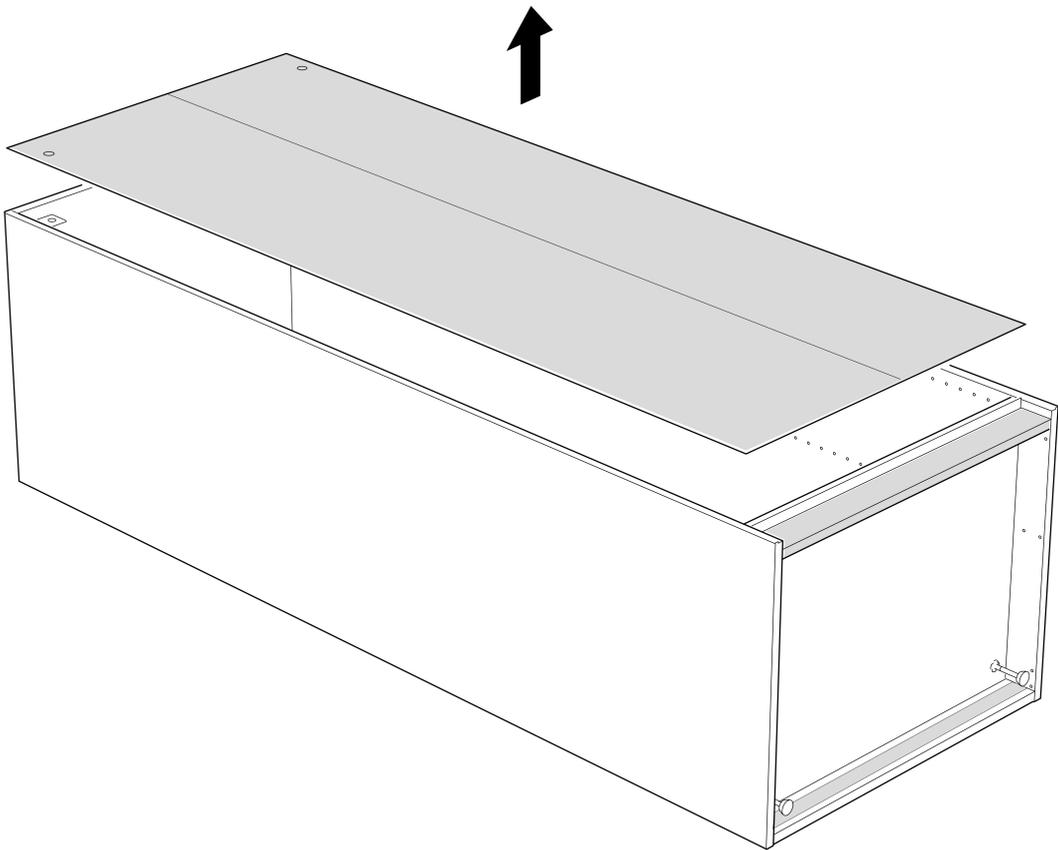


9

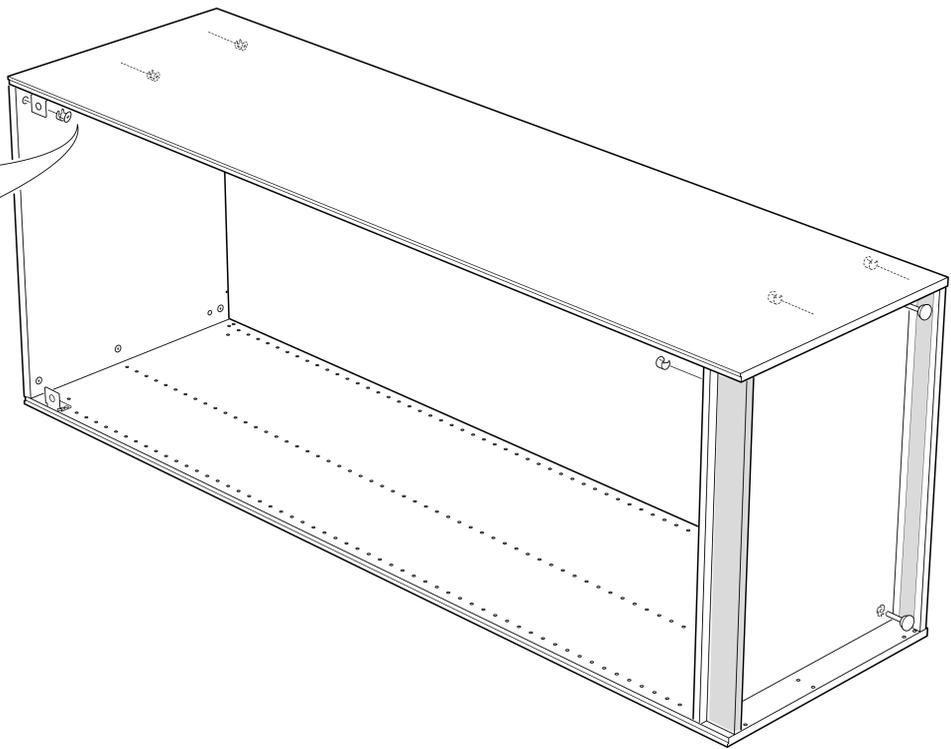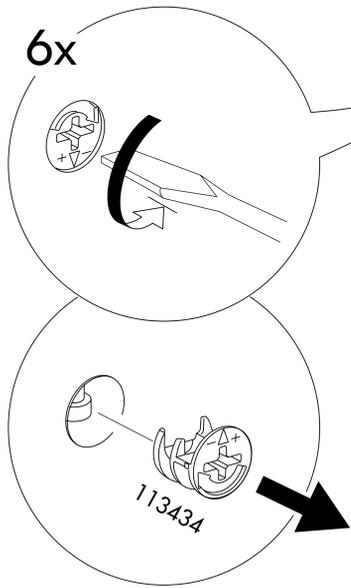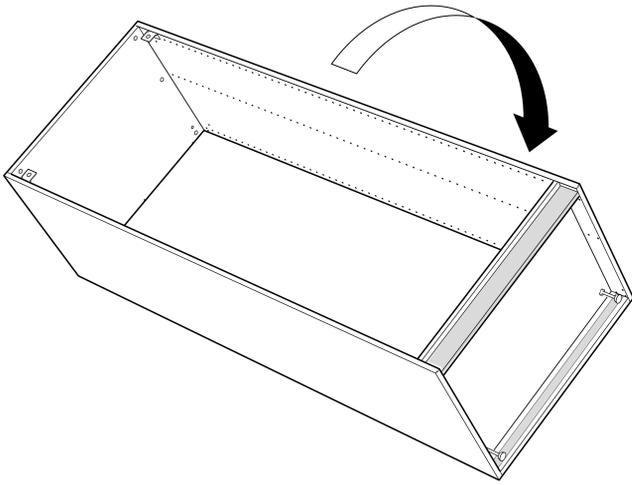


10

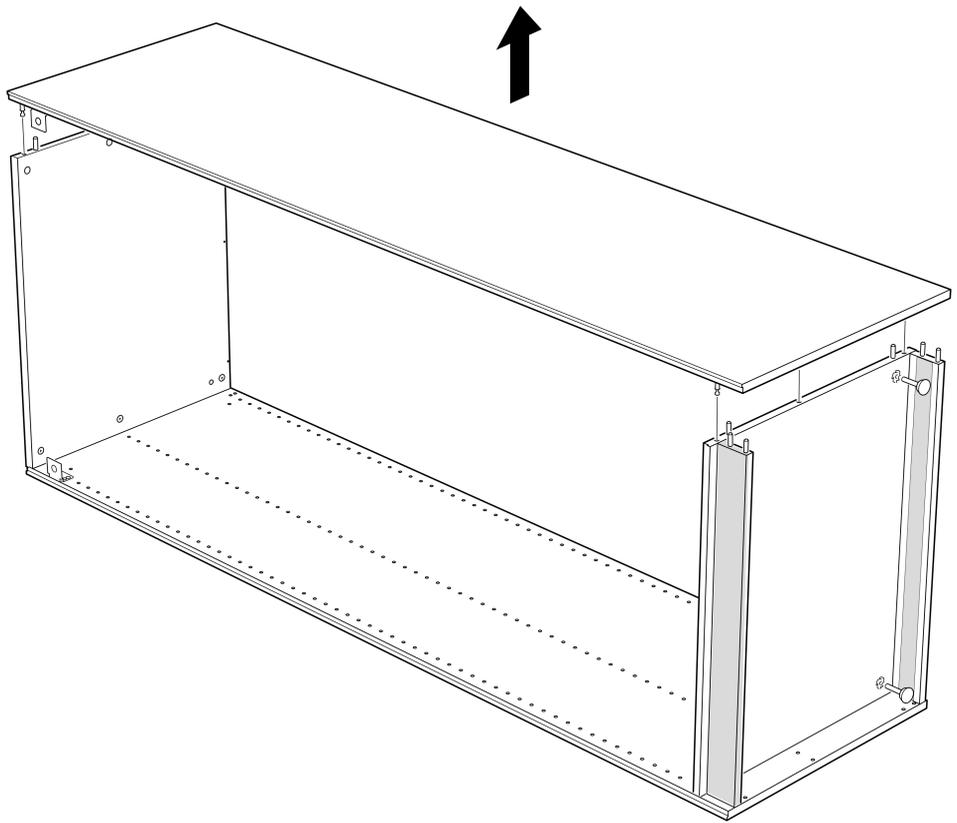


11

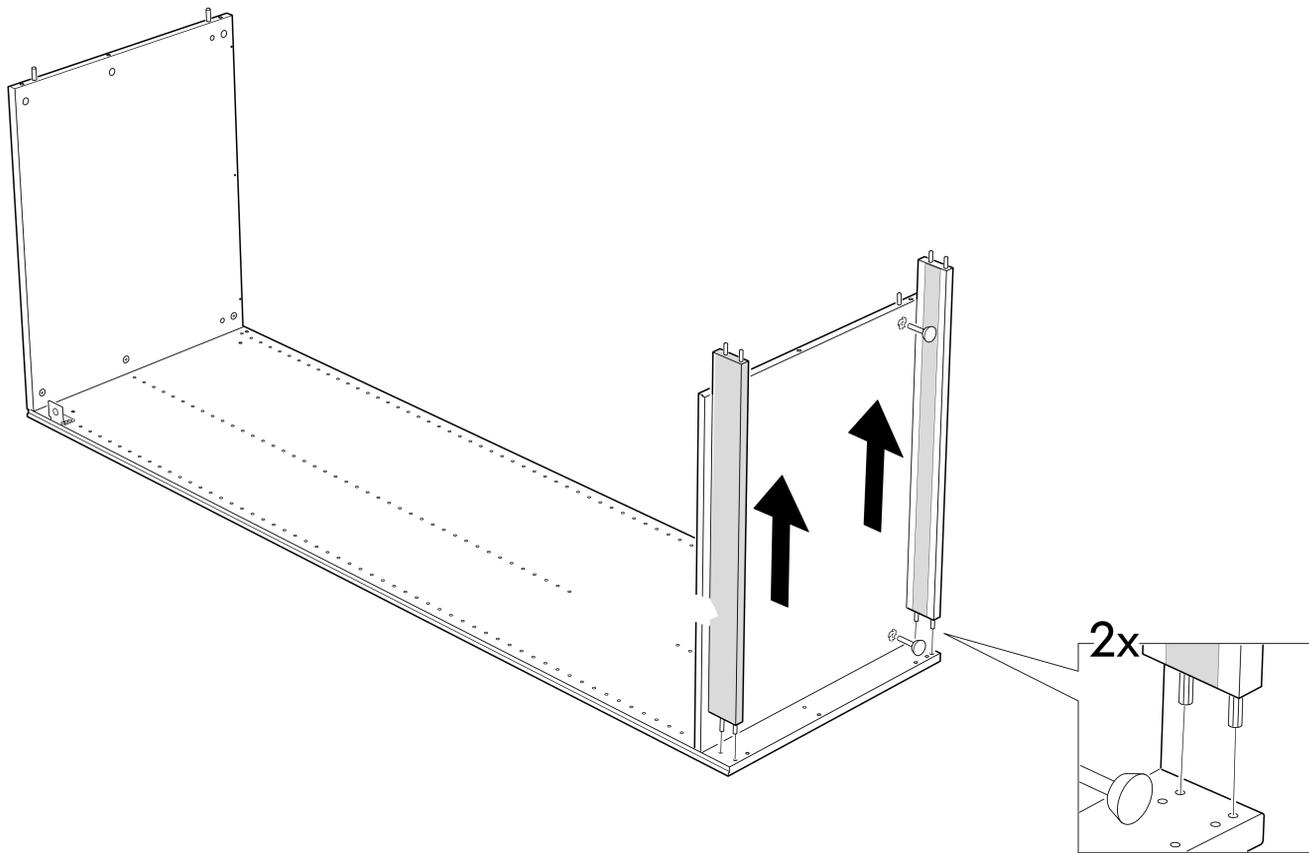


12

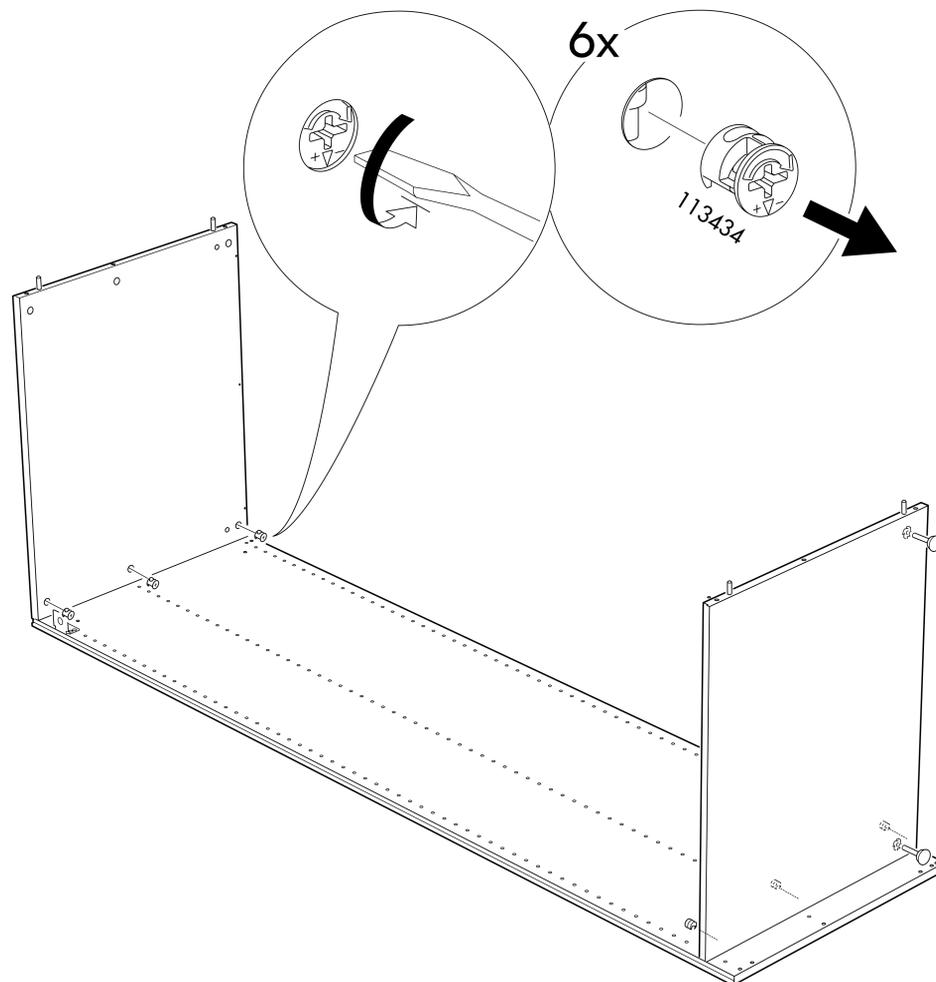


13

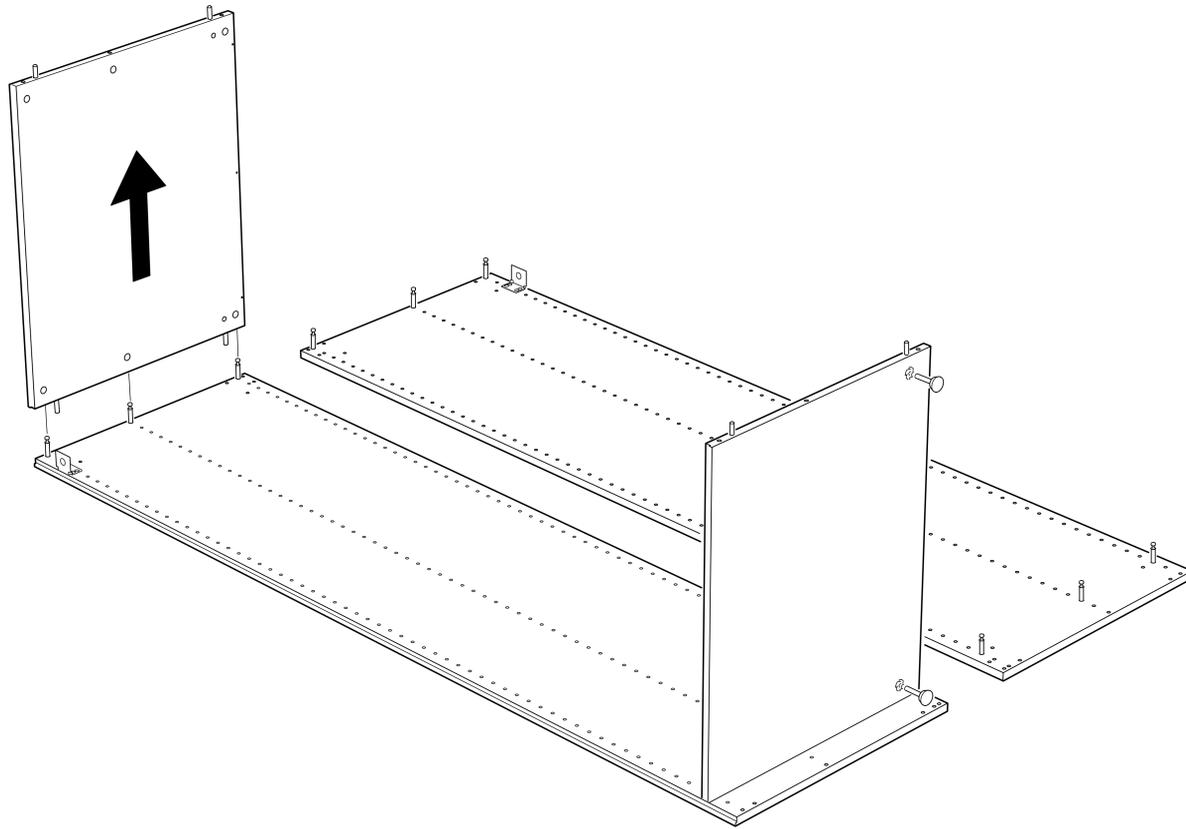


14

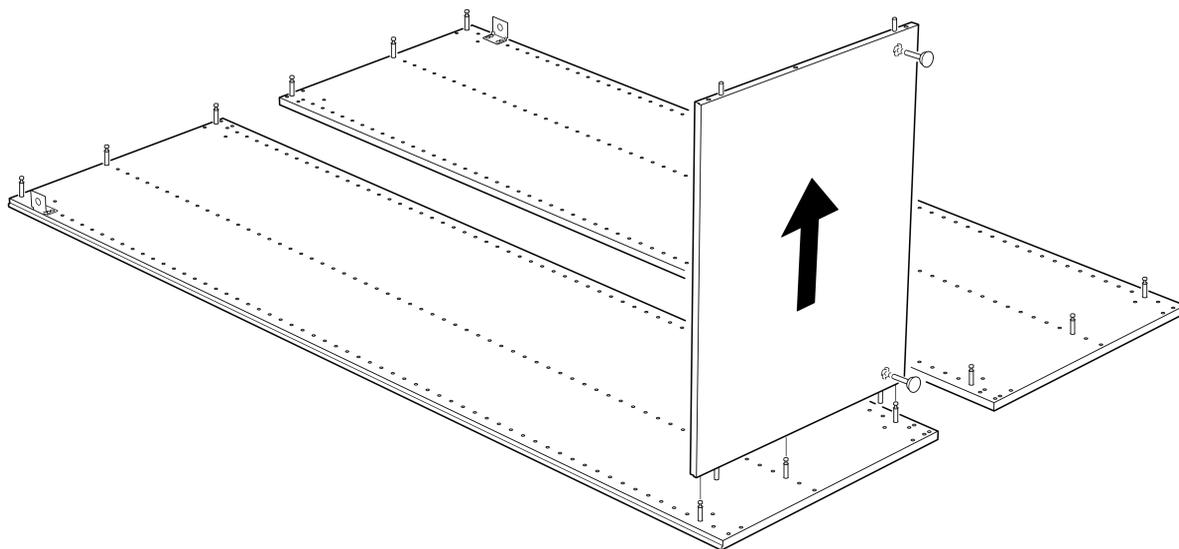

15

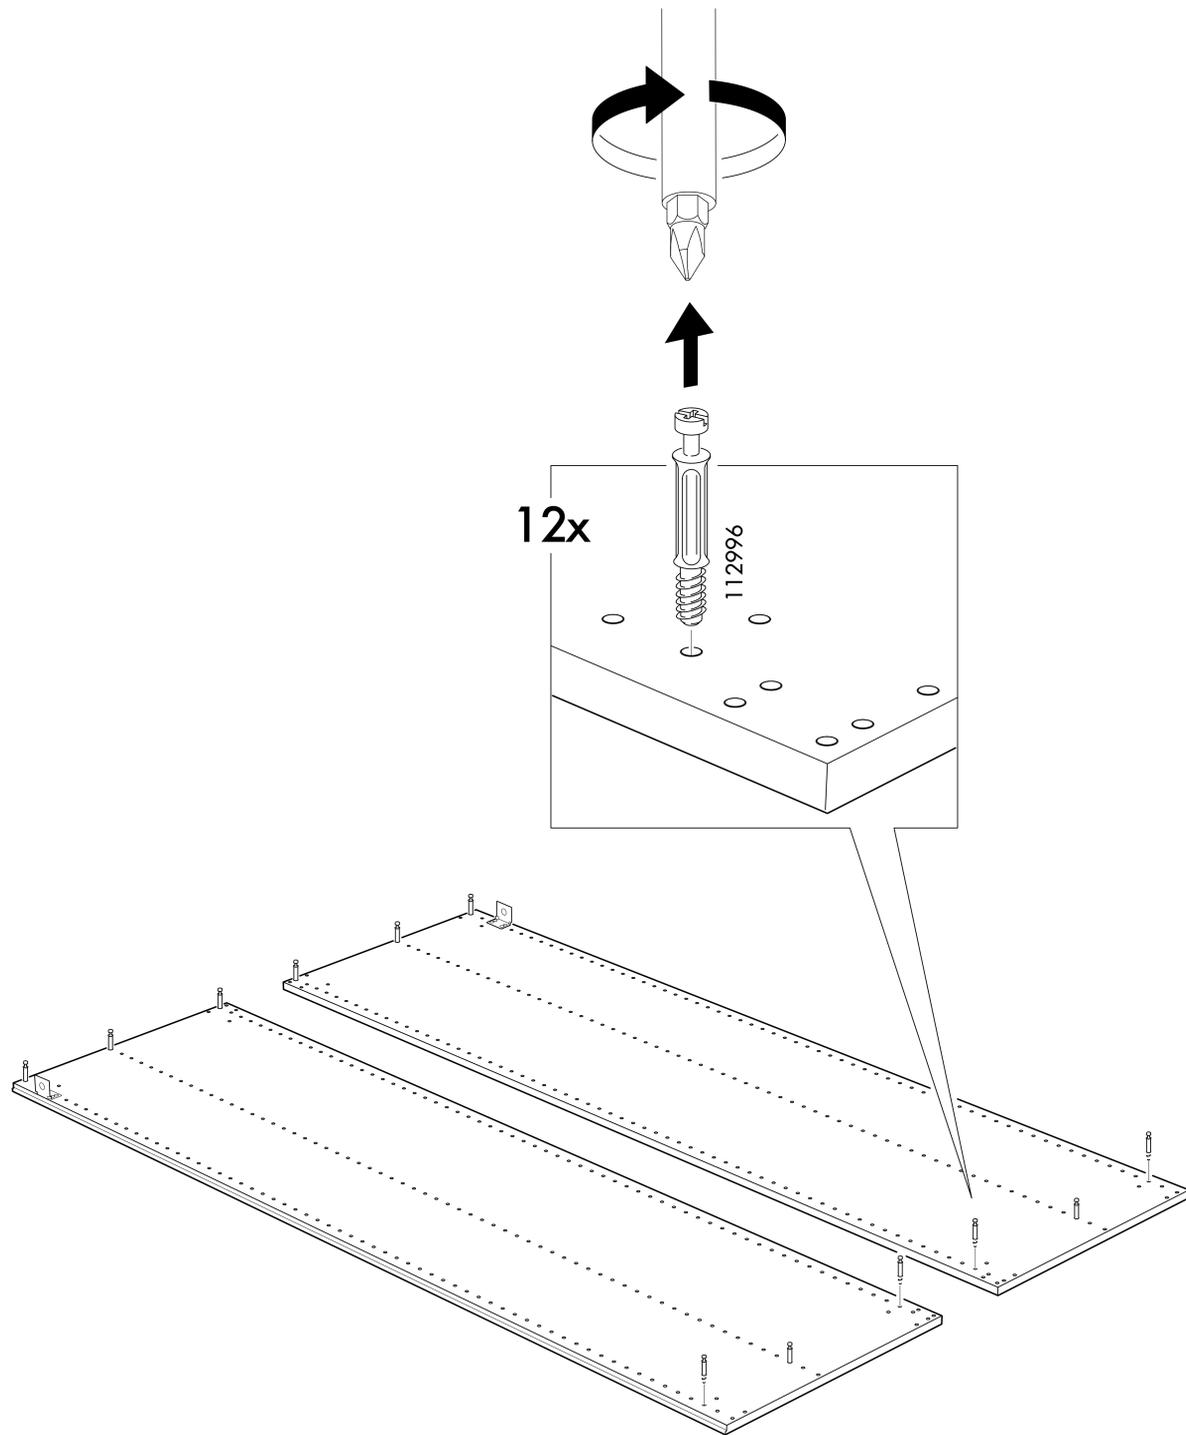


16

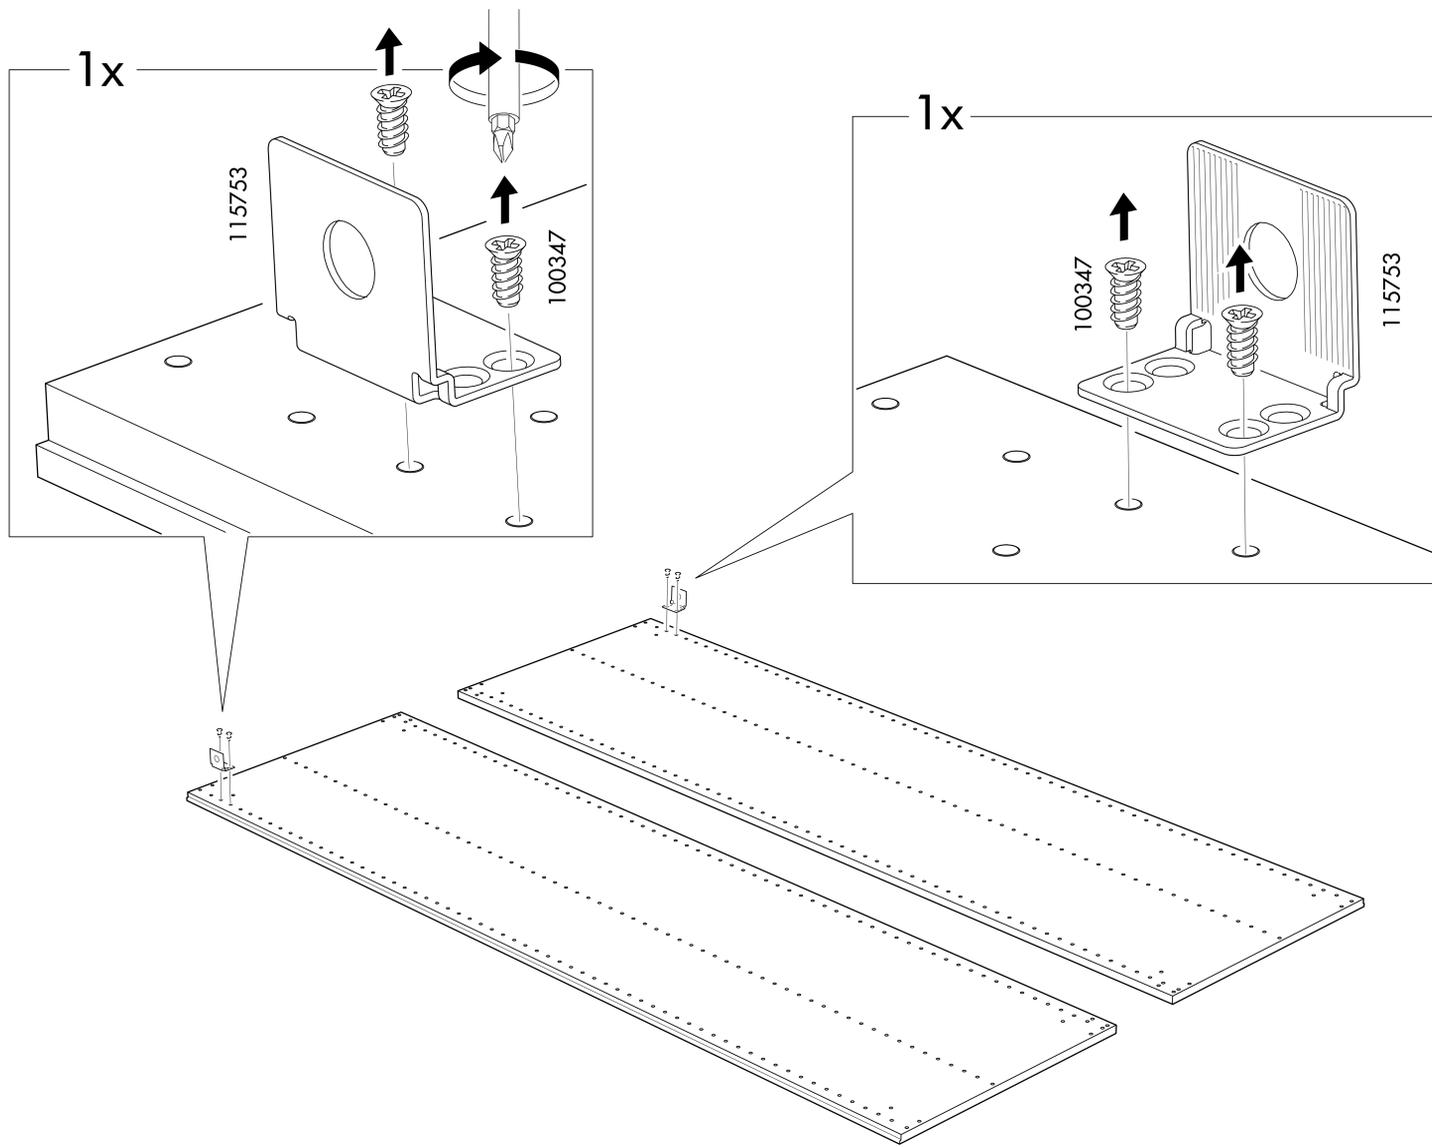

Here are all the parts you should have for your disassembled PAX.

If any screws or bolts are missing, you can pick up free replacements in-store.

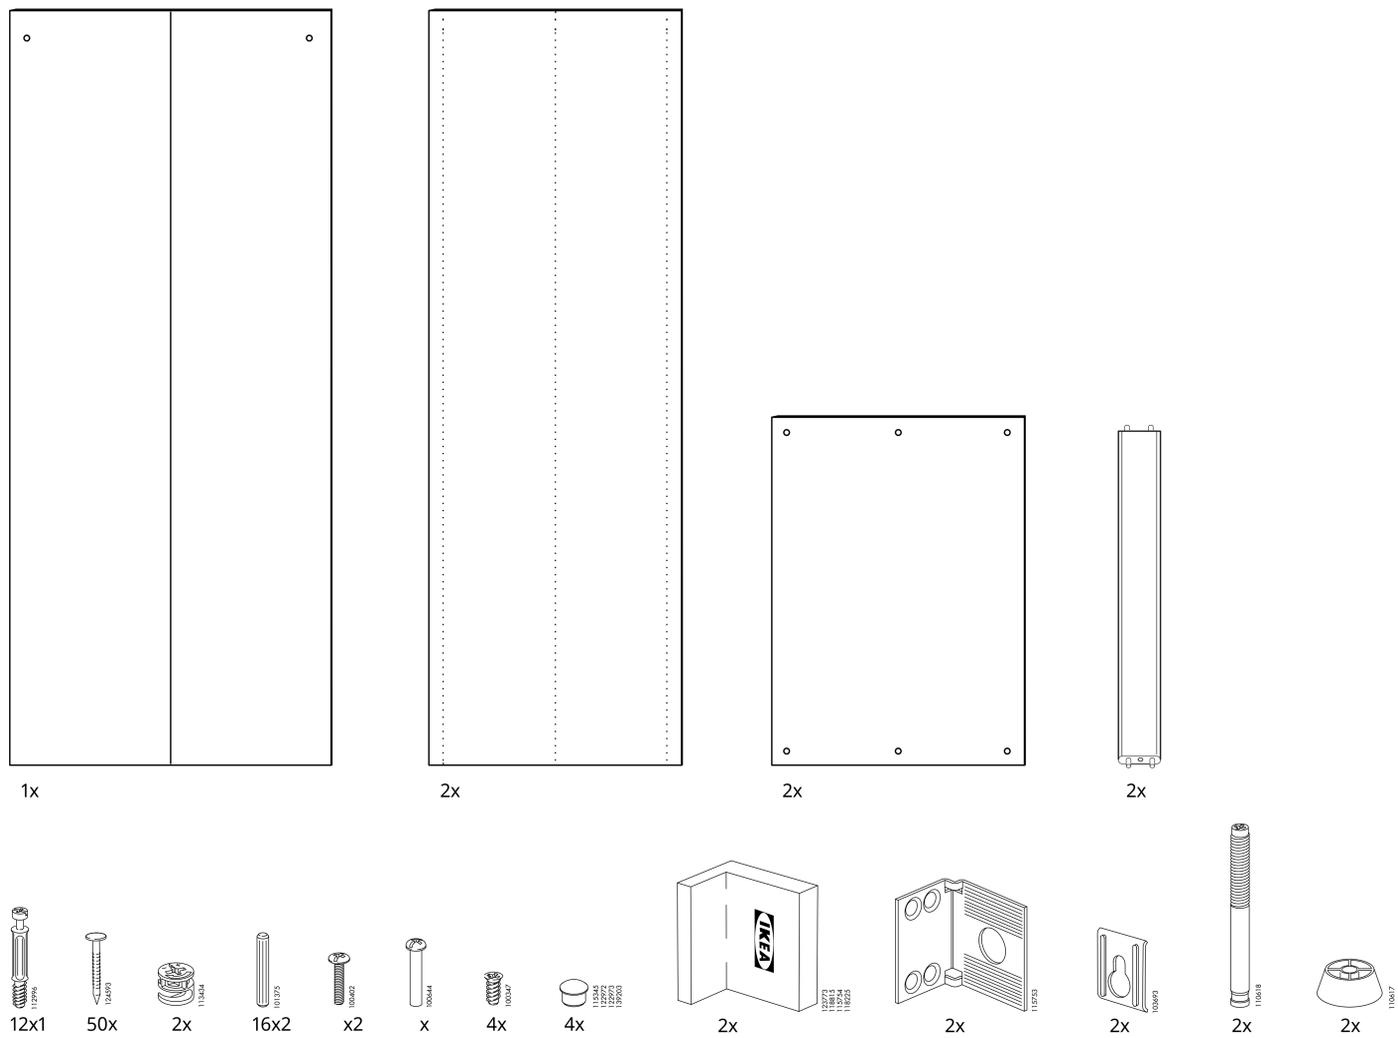

OUR COMMITMENT TO SUSTAINABILITY

Helping you disassemble your furniture to extend its life is just one of the ways we're lowering our impact on the environment.

See more at www.ikea.com/gb/en/this-is-ikea/sustainable-everyday



THE WONDERFUL EVERYDAY